Components for Breakdown

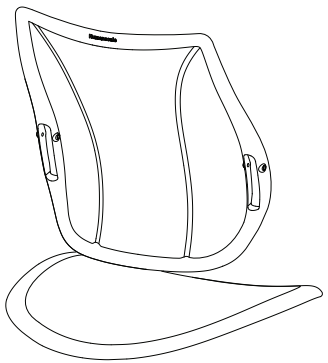

Back & Seat Shells

Arm Pad & Seat Cushion

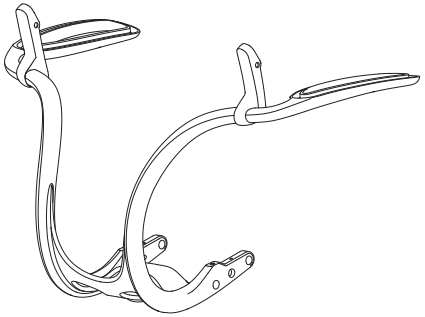

Support Frame

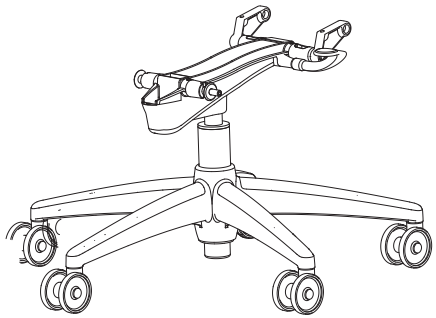

Base

Gas Cylinder

Tools Required

Safety Glasses

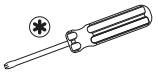

Torx T-20, T-30 Driver

Standard Hex Key Set

Knife

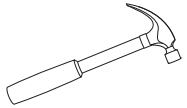

Hammer

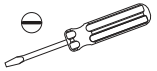

Flat Screwdriver

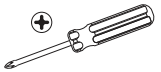

Phillips Screwdriver

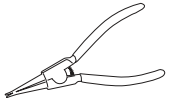

Snap Ring Pliers

Pliers

Tools Required

Safety Glasses

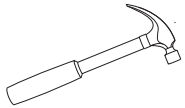
Hammer


Knife

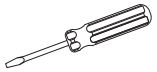
Flat Screwdriver

Pliers

1. Back Removal

Remove pins attaching the Back to Flex Frame.

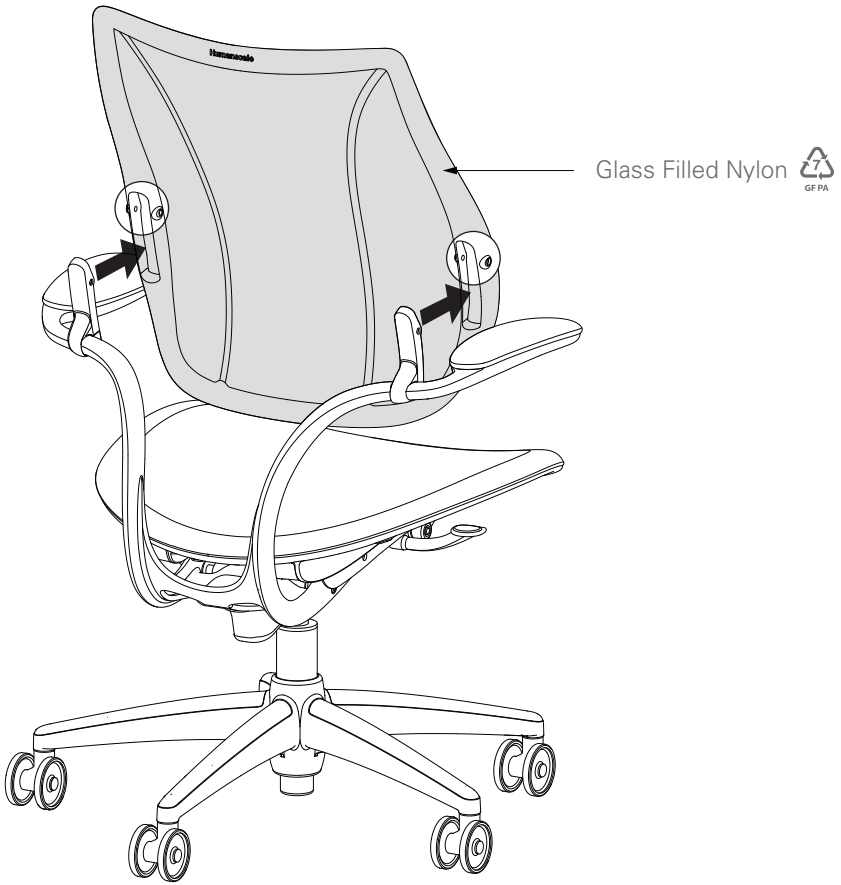

Tools Required

Safety Glasses

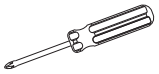

Torx T-20 Driver

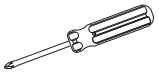

Phillips Screwdriver

Standard Hex Key Set

2. Seat Cushion & Arm Pad Removal

Using Torx/Flat Srewdriver remove screws and release cushion & arm pad.

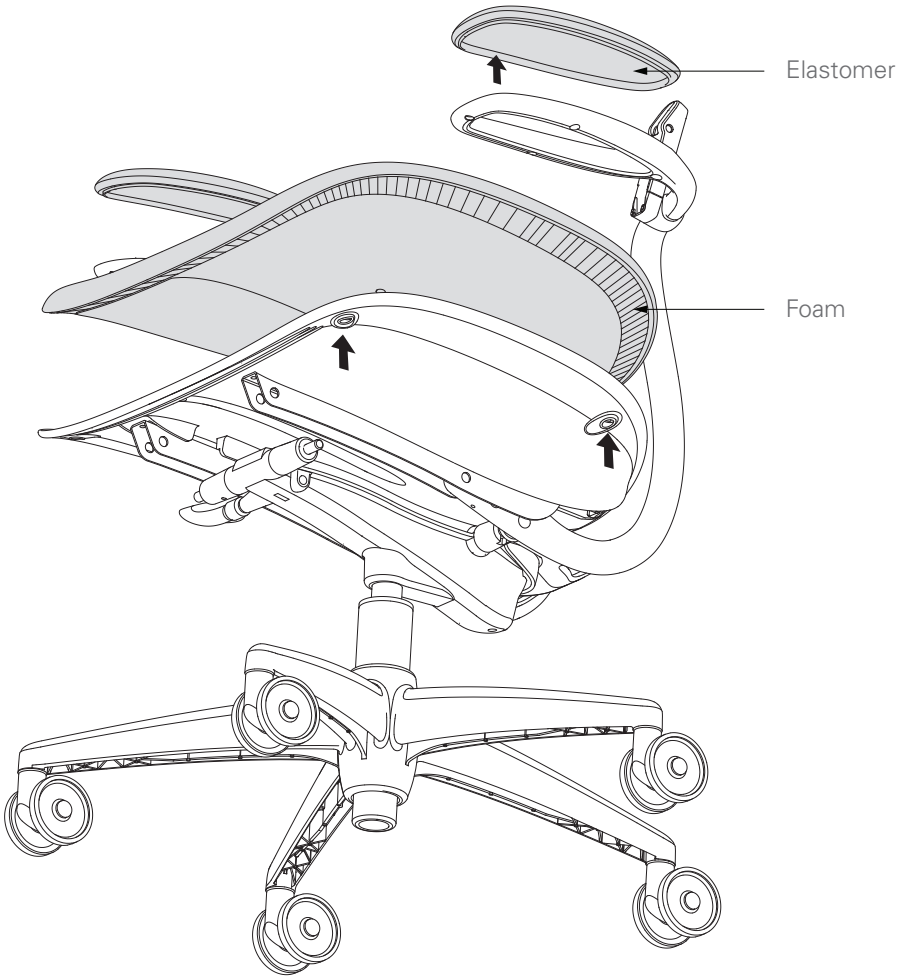

Tools Required

Safety Glasses

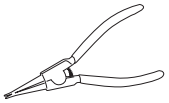

Snap Ring Pliers

3. Seat Shell Removal

Remove pins from Seat Support Housing and remove Seat Shell.

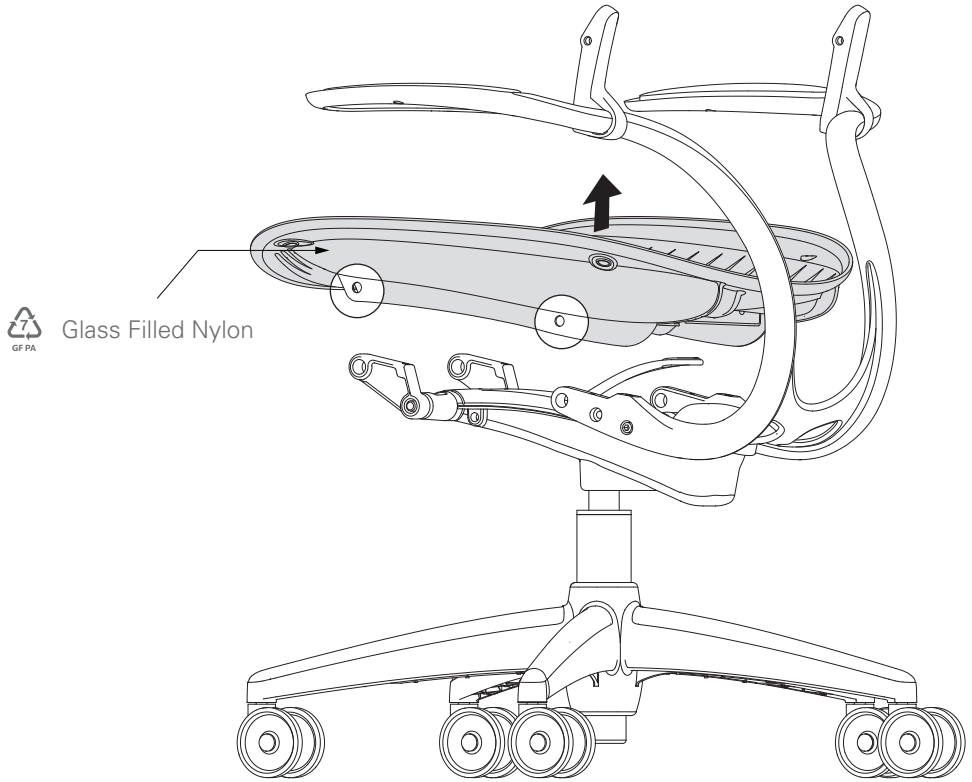

Tools Required

Safety Glasses

Standard Hex Key Set

4. Support Frame Removal

Remove pins and release frame support.

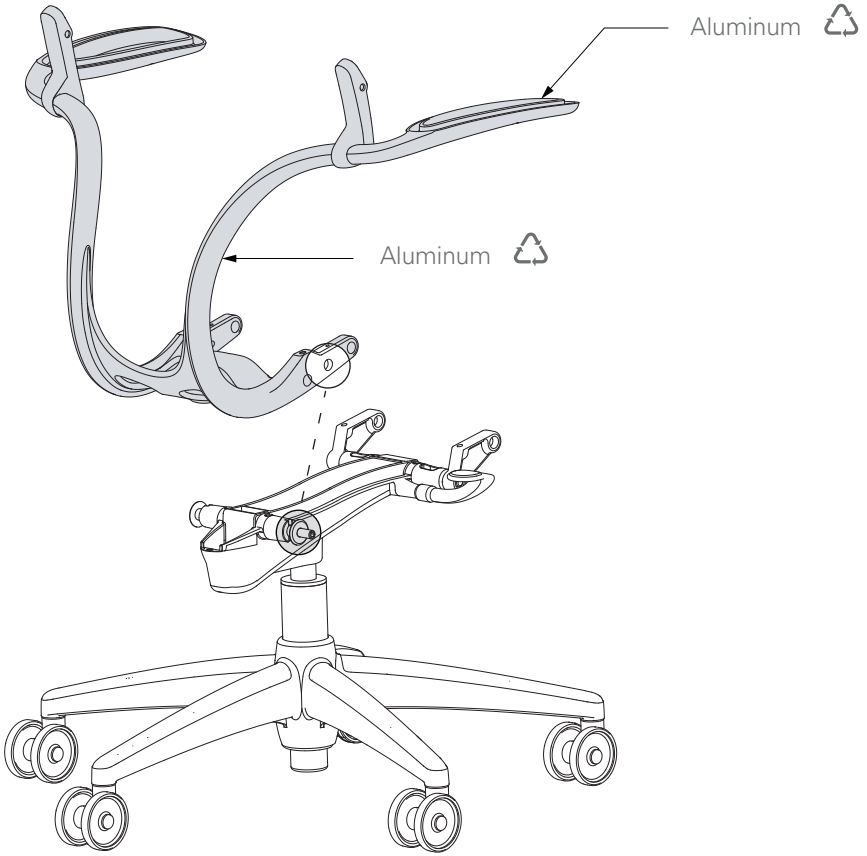

Tools Required

Safety Glasses

Standard Hex Key Set

5. Armrest Removal

Remove screws attaching the arms to the support frame.

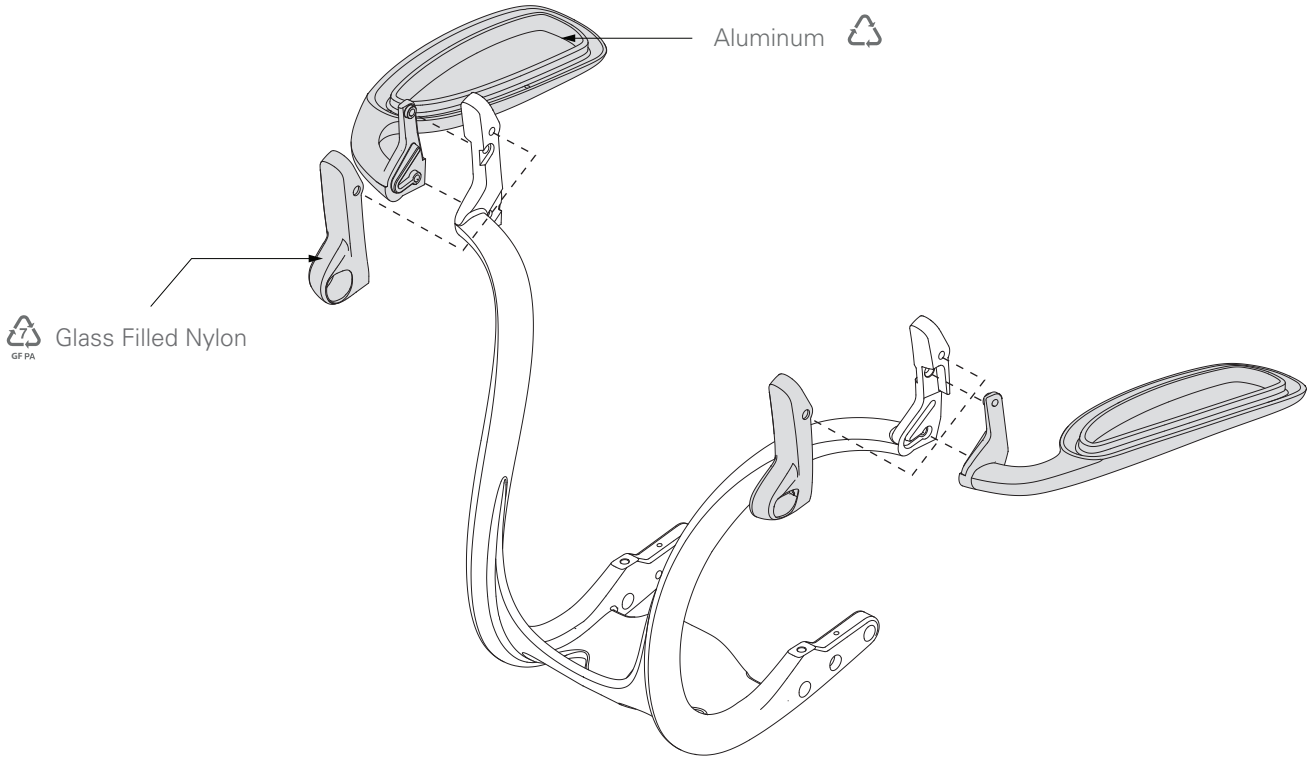

Tools Required

Safety Glasses

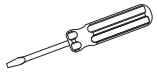
Flat Screwdriver

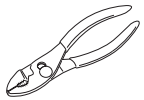
Pliers

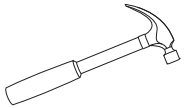
Hammer

Standard Hex Key Set

6. Housing, Base & Cylinder Removal

Remove Gas cylinder from housing and base as shown. Remove casters from base and place all in respective materials bin.
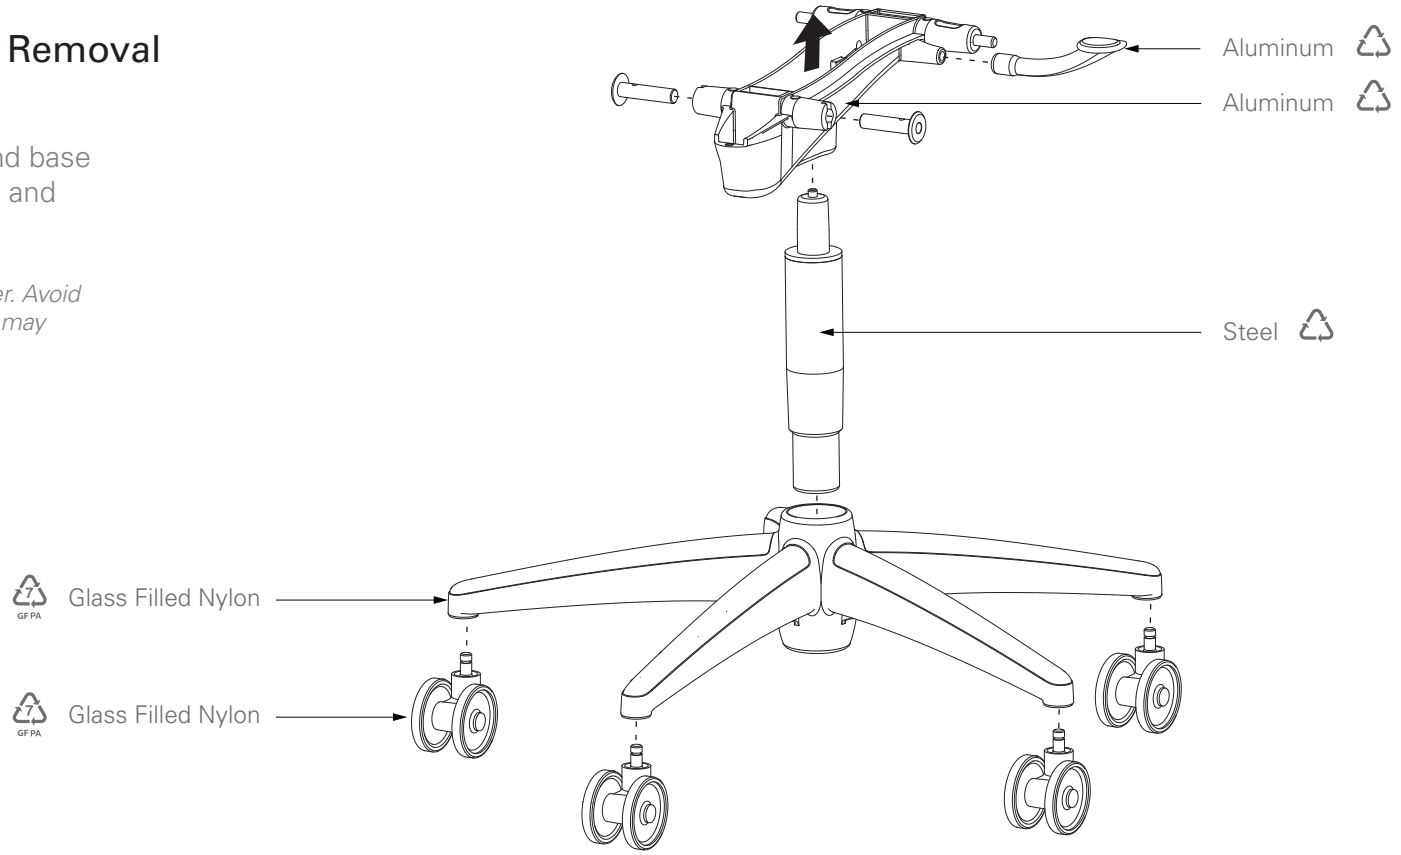
Note: Use care when handling the Gas cylinder. Avoid direct application of force using hammer, as it may damage the cylinder.