

Designed by Jacques Adnet

PRODUCT



Item no.: 61070-XX
+ style code

DESCRIPTION

Few designers have succeeded in making a mirror a design icon but Jacques Adnet was the exception. Today, the elegant leather mirror that Adnet designed in 1950 provides inspiration for designers all over the world. His style is the epitome of luxury, so his 1950's collaboration with the exclusive French fashion house Hermès was a natural. In association with Hermès, Adnet developed a Collection of discreet yet voluptuous leather-covered furniture and interior accessories. This distinctive, round leather mirror with equestrian inspired detailing is a perfect example of Adnet's designs at that time. The mirror is available in either black, olive green or brown leather with strap and in three sizes: Ø45, Ø58 and Ø70 cm. The length of leather strap that supports the mirror is in direct proportion to the mirror diameter.

VERSION

- Tan Full Grain aniline leather / mirror glass
- Black Full Grain aniline leather / mirror glass
- Olive Full Grain aniline leather / mirror glass

MIRROR VERSION

Series contains the following:

Ø45, Ø58, Ø70



ACCESSORIES

Adnet hanging - Brass - Order item no.: 61000-99050

COLOURS



// Tan

// Black

// Olive

FACTS

MEASUREMENT

H:140 X Ø70 cm
Depth of mirror frame: 7 cm
Strap width: 2.3 cm
Leather thickness frame 4,5 X two layers: 9 mm
Leather thickness strap: 4,5 mm

WEIGHT ITEM

7,7 kg

PACKAGING TYPE

Cardboard box

PACKAGING MEASUREMENT - L X W X H CM

L:84 W:84 H:13,5 CM

WEIGHT PACKAGING - MATERIAL TYPE

- Delivery note: 10 g
- Certificate: 10 g
- Assembly instructions: 10 g
- Bubble postal bag: 10 g
- PE polybag: 5 g
- Mounting parts: 45 g
 - Bracket: Burnished brass
 - Drywall plug Driva TP12
 - Hanger bolt
 - Hexalobular socket key
 - Tack-It removable adhesive
 - Nylon dowel 8X40 mm
- Cardboard box outer packaging quality ---: 1544 g
- Cardboard box inner packaging quality ---: 1050 g
- Polystyrene EPS foam: 840 g

WEIGHT PACKAGING - TOTAL

11,5 kg

NUMPER OF PARCELS

1 pcs.

ADNET CIRCULAIRE LARGE // GLASS MIRROR

ADNET COLLECTION

Designed by Jacques Adnet

CLEANING AND MAINTENANCE

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

ENVIRONMENT

Parts can be separated and sorted for recycling.

INSTALLATION INSTRUCTIONS


56-15-300-02 Mounting instr. Adnet Circular Mirror.

DK
RENSERING
Arbejdsgang: støvsug eller støv af med et rent, tør klud. Hvis læderet er soiled, kan det tørres af med en blødt, fugtig klud og en lille smule mildt sæbe og varmt vand. Gør ikke mere overfladen og ikke enkelte partier. Efter mere fugtig klud og tør med en blødt klud bagefter.


Med pletter og sødder, for nemheds skyld væk med det sødder, med en ren blødt eller svamp, lad læderet tørre. Hvis yderligere rengøring er nødvendig, brug de fremgående instruktioner. Hvis læderet er meget soiled, brug blødt sæbe og varmt vand. Efter mere fugtig klud og tør med en blødt klud bagefter.

For ansigtspletter, væk dem med en blødt klud og sæbe. Hvis pletterne er gamle, brug en blødt klud og sæbe og varmt vand. Efter mere fugtig klud og tør med en blødt klud bagefter.

TEKNISK INFORMATION
Denne monteringsinstruks er gældende for modellerne: DMS, DMS og D70 cm og længden på monteringsarmen er 25 cm. Monteringsarmen har to lag læder og væk med det sødder, med en ren blødt eller svamp, lad læderet tørre. Hvis yderligere rengøring er nødvendig, brug de fremgående instruktioner. Hvis læderet er meget soiled, brug blødt sæbe og varmt vand. Efter mere fugtig klud og tør med en blødt klud bagefter.



MONTAGEVEJLEDNING/ASSEMBLY INSTRUCTIONS/MONTAGEANLEITUNG
for
ADNET CIRCULAIRE MIRROR



EN
CLEANING
For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

TECHNICAL INFORMATION
This mirror is available in either back or bottom hanging with a length of 25 cm. The mirror frame has two layers of leather and the strap has a thickness of 4 mm.

DE
REINIGUNG
Für eine normale Reinigung oder um Staub zu entfernen benutzen Sie ein Staubsauger. Reinigen Sie mit einem weichen, feuchten Tuch. Wenn es soiled ist, wischen Sie es ab mit einem weichen, feuchten Tuch. Benutzen Sie eine milde Seife und lauwarmes Wasser. Wischen Sie es ab mit einem weichen, feuchten Tuch. Lassen Sie es trocknen.

Bei Flecken oder Flüssigkeitsverschüttungen, wischen Sie den überschüssigen Flüssigkeit mit einem sauberen Tuch oder Schwamm. Lassen Sie es trocknen. Wenn eine weitere Reinigung notwendig ist, verwenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen Tuch oder Schwamm. Spülen Sie die Oberfläche gut ab und lassen Sie es anschließend vollständig trocknen. Für Butter, Öl oder Fett, wischen Sie es ab mit einem sauberen, trockenen Tuch ab und lassen Sie es trocknen.


Um hartnäckige Flecken zu entfernen, verwenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen und feuchten Schwamm. Spülen Sie die Oberfläche gut ab und lassen Sie es anschließend vollständig trocknen. Für Butter, Öl oder Fett, wischen Sie es ab mit einem sauberen, trockenen Tuch ab und lassen Sie es trocknen.

Um hartnäckige Flecken zu entfernen, verwenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen und feuchten Schwamm. Spülen Sie die Oberfläche gut ab und lassen Sie es anschließend vollständig trocknen. Für Butter, Öl oder Fett, wischen Sie es ab mit einem sauberen, trockenen Tuch ab und lassen Sie es trocknen.

TECHNISCHE DATEN
Der Spiegel ist erhältlich in Rücken- oder Untenhängend mit einer Länge von 25 cm. Der Spiegelrahmen hat zwei Schichten Leder und die Befestigungsarm hat eine Dicke von 4 mm.

GUBI

INDHOLD/CONTENTS/INHALT:




1. DK: Monteret af holder.
EN: How to mount the bracket.
DE: Montage der Halterung.

DK: Trævæg.
EN: Wooden wall.
DE: Holzwand.

DK: Betonvæg.
EN: Concrete wall.
DE: Betonwand.

MONTAGEVEJLEDNING/ASSEMBLY INSTRUCTIONS/MONTAGEANLEITUNG
ADNET CIRCULAIRE

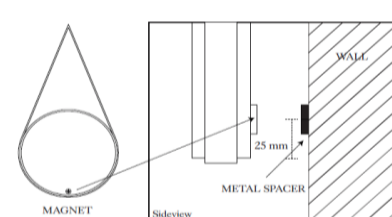

2. DK: Monteret af metal skive til magnet.
EN: How to mount the metal spacer for the magnet.
DE: Montage der Abtandhalter für den Magnet.

DK: Monter den medfølgende metalskive på væggen 25 mm fra bunden af spejlet. Magneten på bagsiden af spejlet vil dermed sikres, at det altid hænger tæt ind til væggen.

EN: Mount the enclosed metal spacer on the wall 25 mm from the bottom of the mirror. The magnet on the back of the mirror will then ensure, that it always hangs close to the wall.

DE: Montieren Sie die beigelegte Metallscheibe in der Höhe von 2,5 cm vom unteren Rahmen des Spiegels an der Wand. Der Magnet auf der Rückseite des Spiegels wird dadurch gesichert, dass der Spiegel immer an der Wand hängt.

MINIMUM CEILING HEIGHT

