



Design House

Stockholm

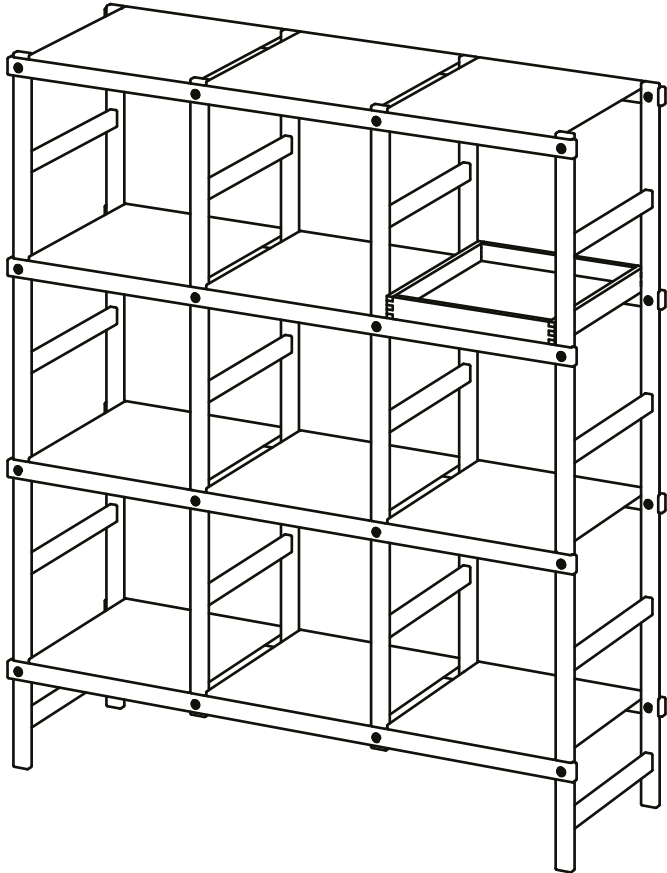


Assembly Instructions
Frame High (2740-8401)



Components (Hardware & Tools):

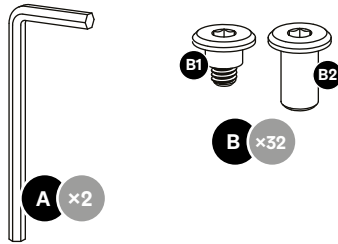


Wall Mounting Kit:

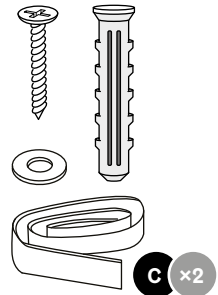


Components:

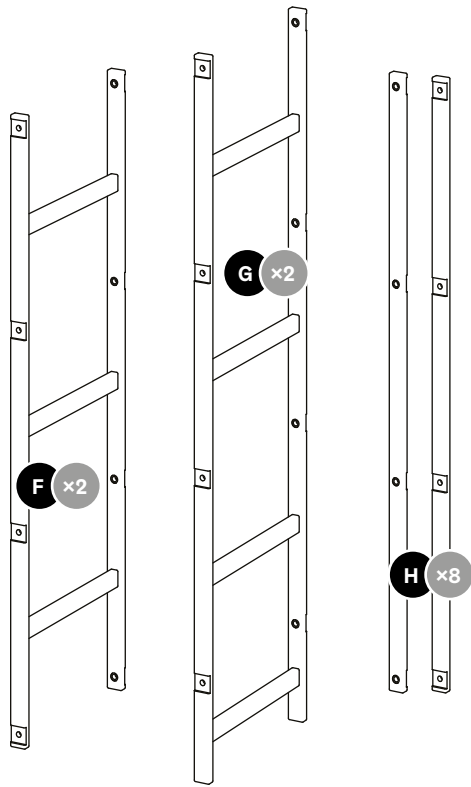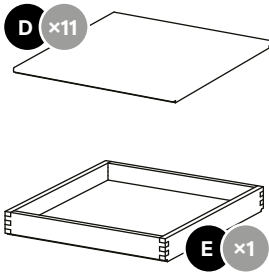


Tools needed:

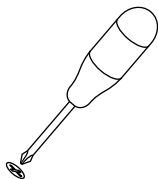


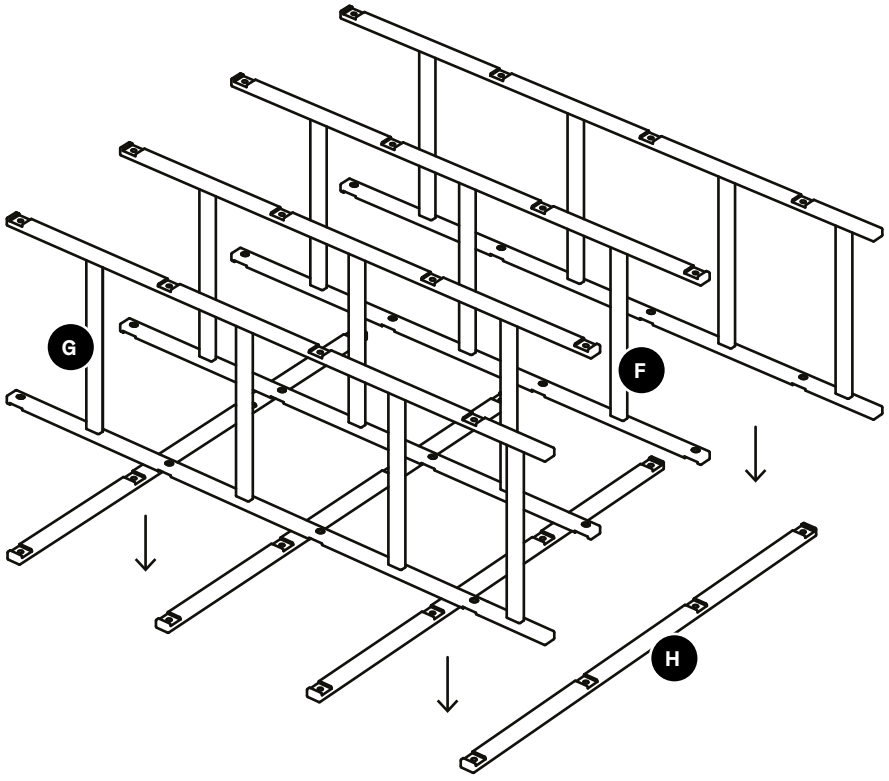


Step 2.

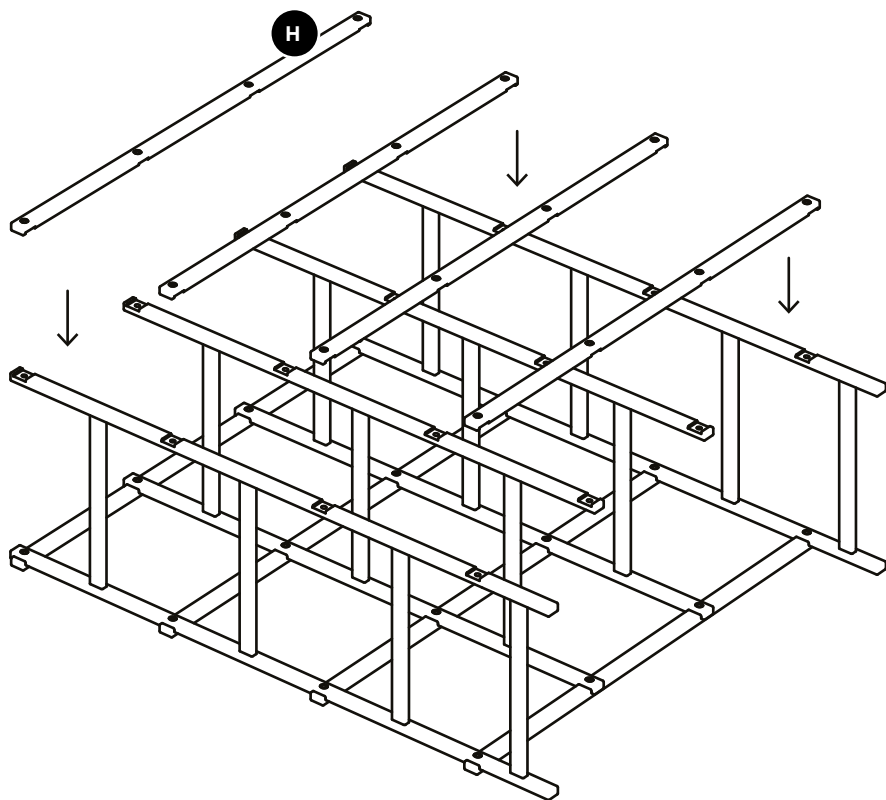

Step 3.

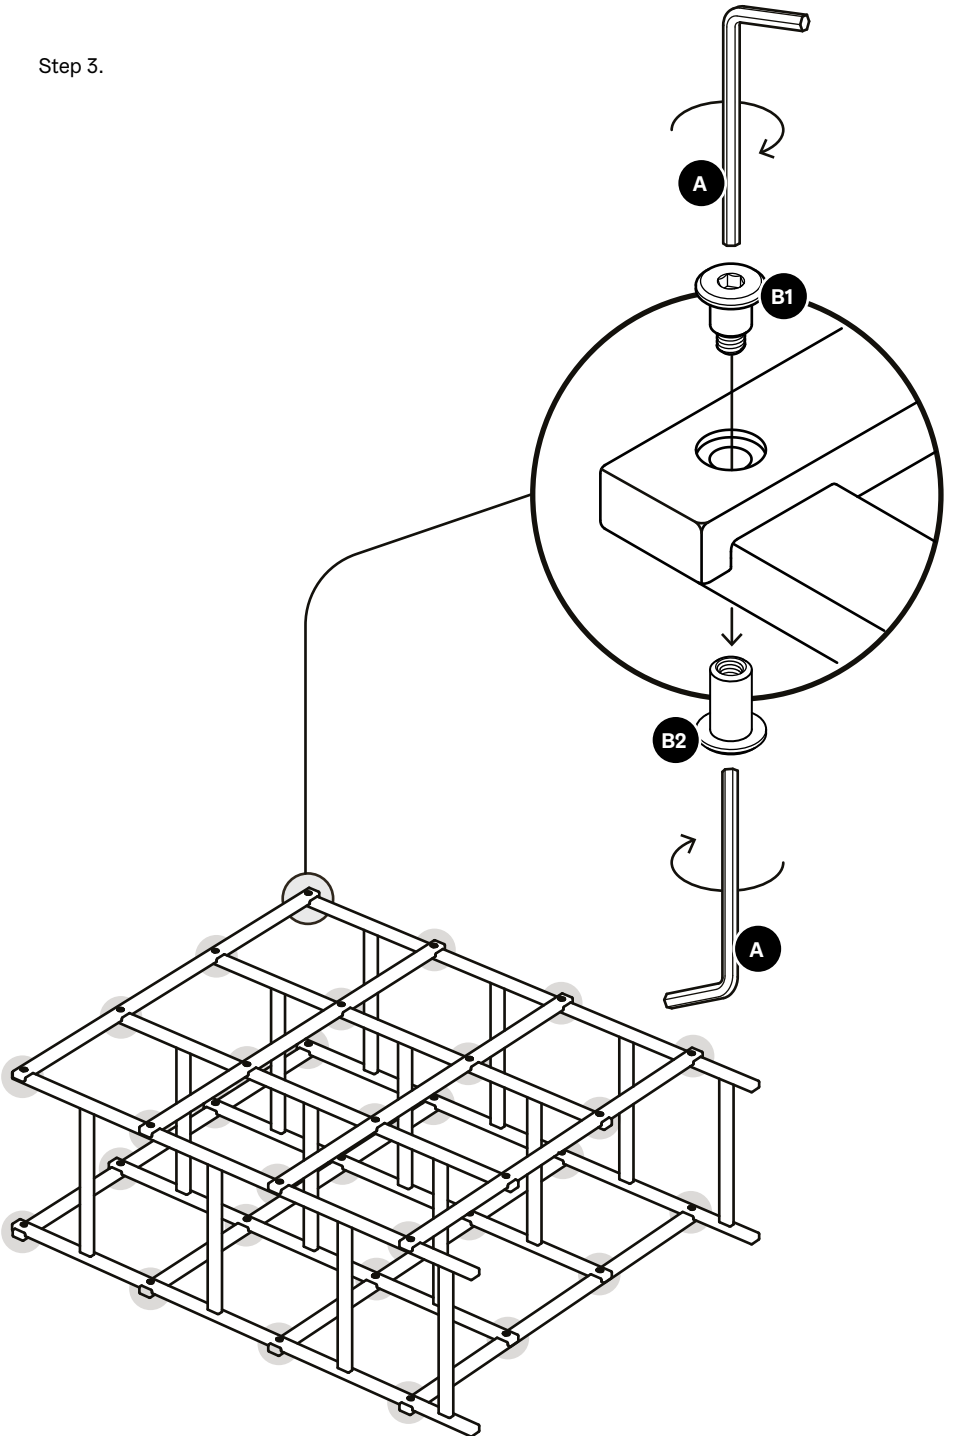

Step 4.

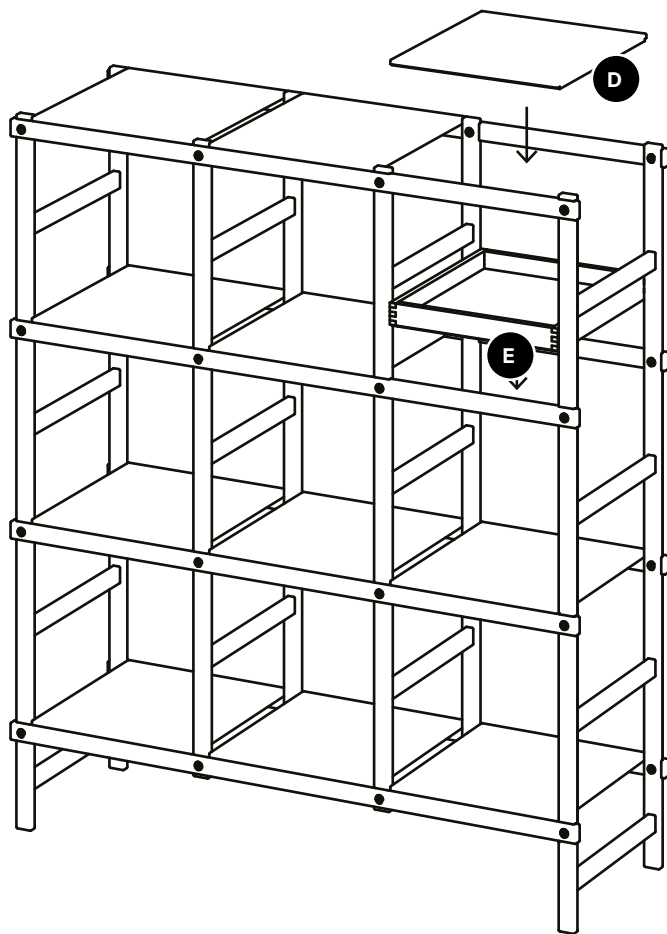

Step 5.

