

Aufbauanleitung 12/2019

WERKZEUG:

Innensechskantschlüssel SW5 (beiliegend) und SW6

16x XS Stahldübel


16x Verbinder Gehäuse

16x Madenschrauben

Zylinderkopfschrauben M 6x 70




Beilagscheiben

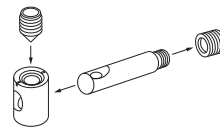


Funktionsvideo:
<https://www.youtube.com/watch?v=ioLUTDqtvgE>


Führen Sie den Aufbau des Tisches auf einer weichen Unterlage (z.B. einer Decke) aus, um Beschädigungen zu vermeiden.

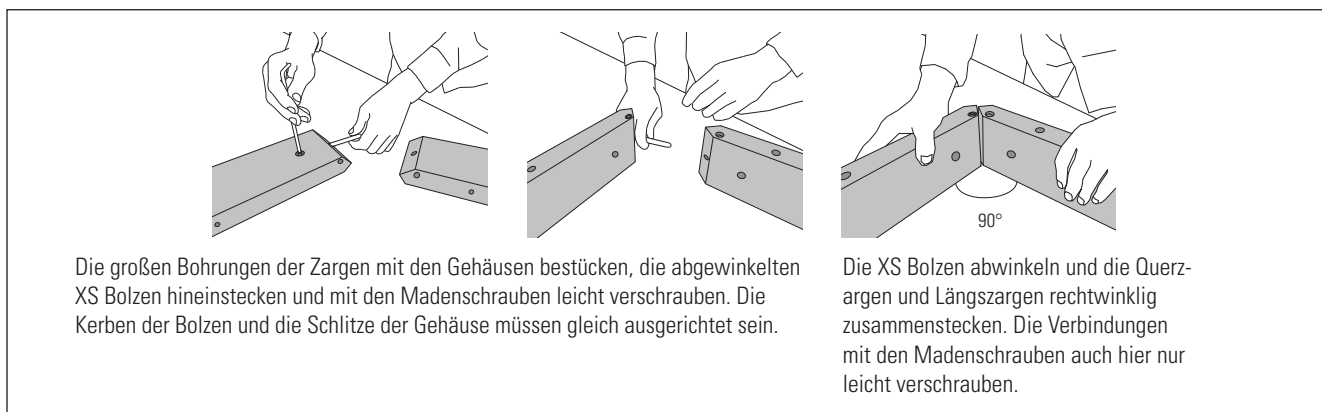



Der Zargenrahmen wird bereits vormontiert geliefert.

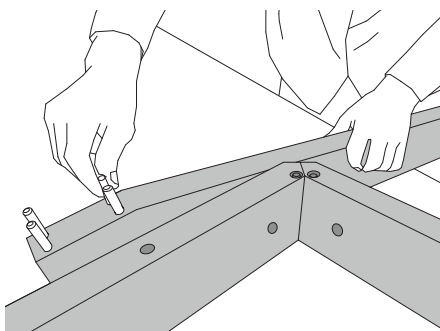


1. Nun die Tischbeine mit jeweils 4 geraden XS Bolzen bestücken. Diese bis zum Anschlag eindrehen und anschließend eine viertel bis halbe Umdrehung zurückdrehen, sodass die Kerben vertikal ausgerichtet sind.

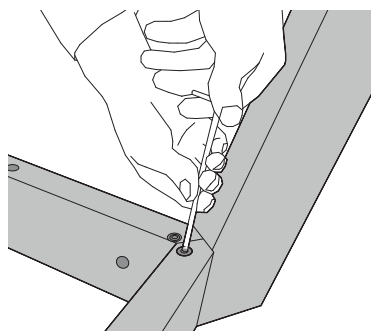

2. Die Zargen auf der Ober- und Unterseite mit den jeweils zwei Gehäusen bestücken, die Tischbeine mit den vier geraden XS Bolzen darauf stecken und die Verbindung mit den Madenschrauben oben und unten leicht verschrauben.

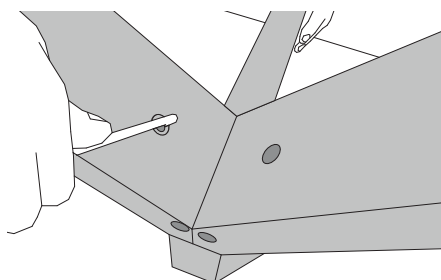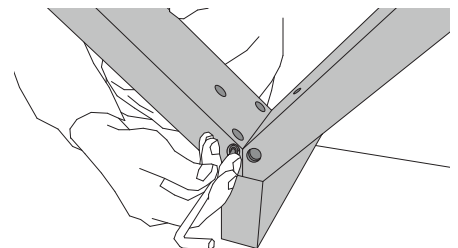

3. Wenn alle Tischbeine mit den Längszargen verschraubt sind, können zuerst die Madenschrauben der Tischbeine und am Schluss die Madenschrauben der abgewinkelten XS Verbinder in den Zargen fest angezogen werden.

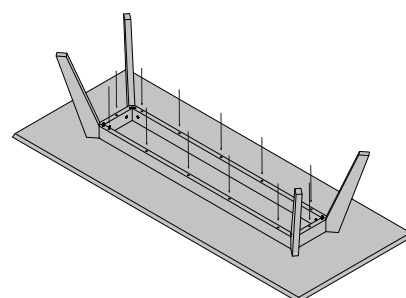

4. Das Gestell nun mit den Zylinderkopfschrauben und Beilagscheiben an die Tischplatte schrauben.

Assembly instructions 12/2019

Tools:

allen screw SW5 (enclosed) and SW6

16x XS steel debs


16x boxes

16x grub screws

Cylinder head bolts M 6x 70




Disks

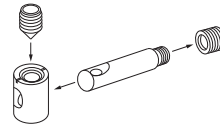


scheulenburg setup video :
<https://www.youtube.com/watch?v=iolUTDqtvgE>


Please do the setup of the table on a soft surface (e.g. a carpet or blanket) to avoid damages.

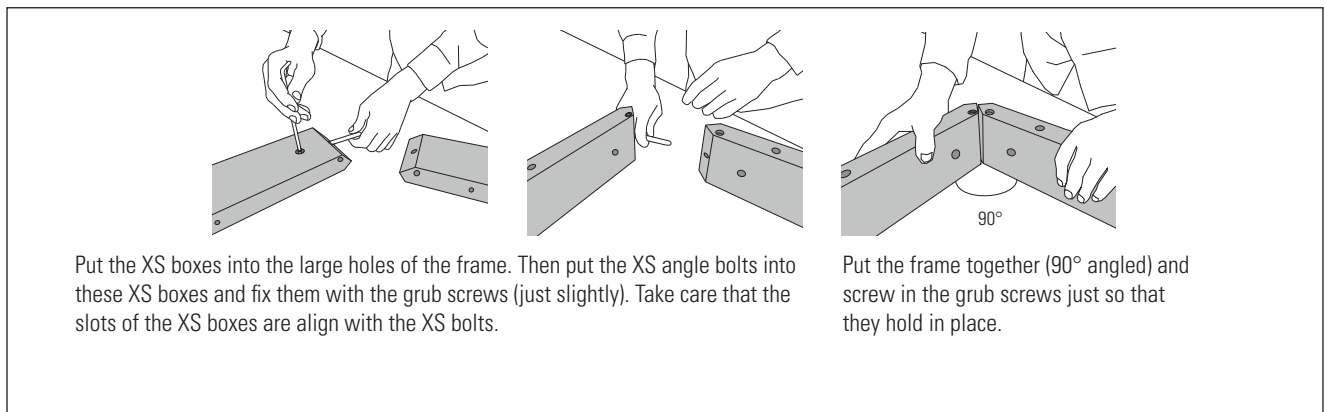



The frame will be delivered mounted already.

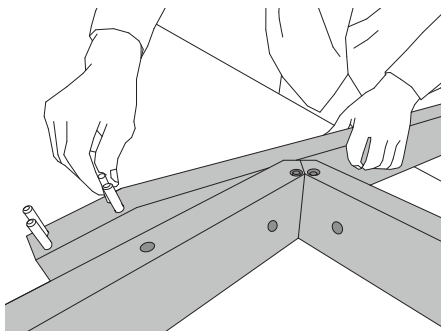


1. Screw four XS steel debs slightly into every table leg. Screw them in completely and then a quarter or half turn back, so the alignment of the holes is vertical.

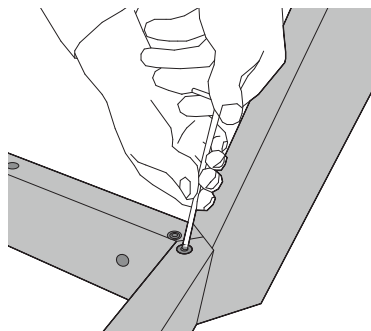

2. Put two XS boxes into the top and bottom side of the frame. Stick the table legs onto the frame and fix the connection with the the grub screws (again only slightly!).

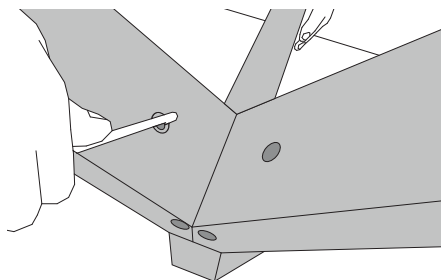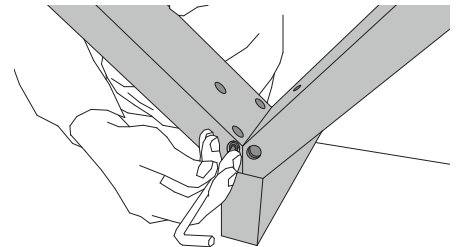

3. When all table legs are connected with the frame tighten first all grub screws of the table legs. Afterwards tighten all grub screws of the frame.

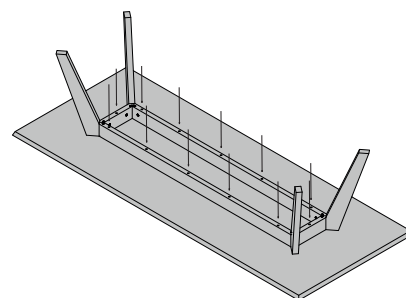

4. At last use the cylinder head screws with the disk to fix the frame to the table top.