


Designed by Jacques Adnet

PRODUCT



COLOURS

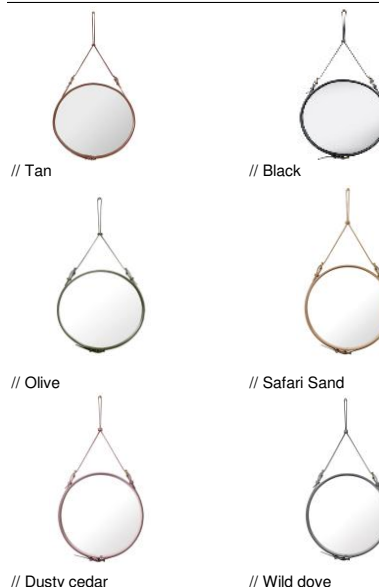

DESCRIPTION

Few designers have succeeded in making a mirror a design icon but Jacques Adnet was the exception. Today, the elegant leather mirror that Adnet designed in 1950 provides inspiration for designers all over the world. His style is the epitome of luxury, so his 1950's collaboration with the exclusive French fashion house Hermès was a natural. In association with Hermès, Adnet developed a Collection of discreet yet voluptuous leather-covered furniture and interior accessories. This distinctive, round leather mirror with equestrian inspired detailing is a perfect example of Adnet's designs at that time. The mirror is available in either black, olive green or brown leather with strap and in three sizes: Ø45, Ø58 and Ø70 cm. The length of leather strap that supports the mirror is in direct proportion to the mirror diameter.

The mirror is also available three colors in Alcantara in Ø58 cm, Dusty cedar, Safari sand and Wild dove.


VERSION

- Tan Full Grain aniline leather / mirror glass
- Black Full Grain aniline leather / mirror glass
- Olive Full Grain aniline leather / mirror glass
- Wild dove Alcantara / mirror glass (only available in Ø58 cm)
- Dusty cedar Alcantara / mirror glass (only available in Ø58 cm)
- Safari sand Alcantara / mirror glass (only available in Ø58 cm)

MIRROR VERSION

Series contains the following:

Ø45, Ø58, Ø70

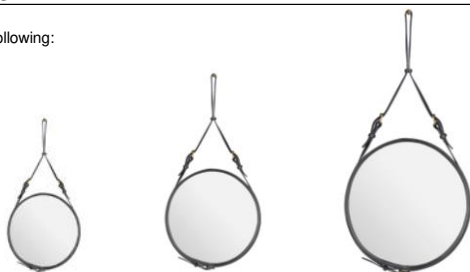

ACCESSORIES

Adnet hanging - Brass - Order item no.: 61000-99050

FACTS

MEASUREMENT

H: 116 X Ø58 cm
 Depth of mirror frame: 7 cm
 Strap width: 2.3 cm
 Leather / Alcantara thickness frame 4,5 X two layers: 9 mm
 Leather / Alcantara thickness strap: 4,5 mm
 Mirror glass 4mm according to EN 1036-2

WEIGHT ITEM

5,7 kg

PACKAGING TYPE

Cardboard box

PACKAGING MEASUREMENT - L X W X H CM

L:70 W:70 H:13,5 CM

WEIGHT PACKAGING - MATERIAL TYPE

- Delivery note: 10 g
- Certificate: 10 g
- Assembly instructions: 10 g
- Bubble postal bag: 10 g
- PE polybag: 5 g
- Mounting parts: 45 g
 - Bracket: Burnished brass
 - Drywall plug Driva TP12
 - Hanger bolt
 - Hexalobular socket key
 - Tack-it removable adhesive
 - Nylon dowel 8X40 mm
- Cardboard box outer packaging quality ---: 1150 g
- Cardboard box inner packaging quality ---: 809 g
- Polystyrene EPS foam: 450 g

WEIGHT PACKAGING - TOTAL

8,1 kg

NUMPER OF PARCELS

1 pcs.

Designed by Jacques Adnet
CLEANING AND MAINTENANCE

Leather:

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

Alcantara:

For normal cleaning, dust frequently with a clean, dry cloth. If there are difficult spots or stains, use specified Alcantara cleaning products. If such products are not available use a sponge or soft cloth wung in clean water and run over the whole Alcantara surface. Please do not wet the surface excessively. Let it dry and do not use a hair dryer, steam machine or other heat source to dry the Alcantara. Afterwards the surface can be brushed with a soft brush.

ENVIRONMENT

Parts can be separated and sorted for recycling.

INSTALLATION INSTRUCTIONS

56-15-300-02 Mounting instr. Adnet Circular Mirror.

GUBI

MONTAGE- / BEDIENUNG- / ASSEMBLY INSTRUCTIONS / MONTAGEANLEITUNG

for

ADNET CIRCULAIRE MIRROR

DK: Rensning
EN: Cleaning
DE: Reinigung

TEKNIKK INFORMATION

TECHNICAL INFORMATION

TECHNISCHE DATEN

56-15-300-02 Mounting instr. Adnet Circular Mirror

GUBI

MONTAGE- / BEDIENUNG- / ASSEMBLY INSTRUCTIONS / MONTAGEANLEITUNG

ADNET CIRCULAIRE

1. DK: Monterings af holder.
EN: How to mount the bracket.
DE: Montage der Halterung.

2. DK: Monterings af metal skive til magnet.
EN: How to mount the metal spacer for the magnet.
DE: Montage der Abstandhalter für den Magnet.

1500 MIN. 2370 MIN. CEILING HEIGHT

MINIMUM CEILING HEIGHT

