

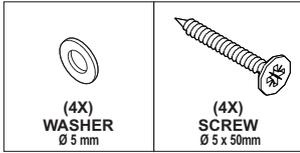


## 12345-U - 12346-U OAK BURUNG STORAGE CUPBOARD - BLACK ASSEMBLY INSTRUCTION FOR CUPBOARD INSTALLATION

### HARDWARE

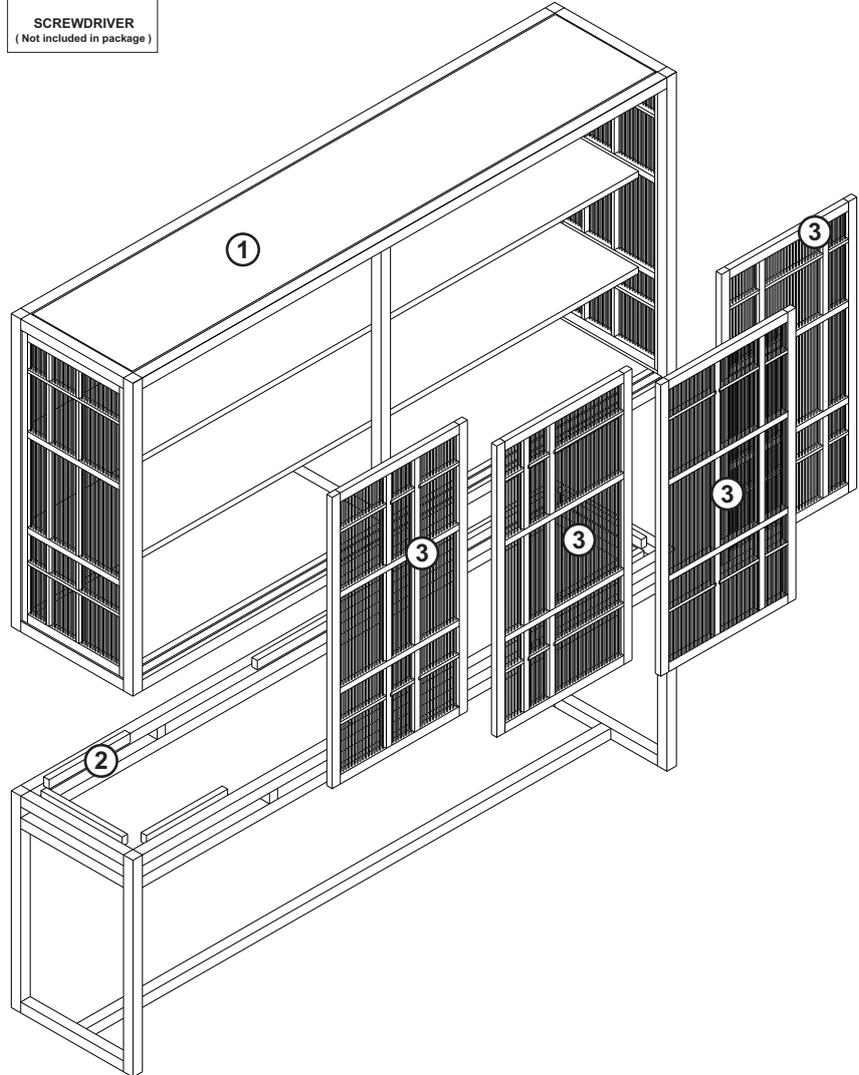

### TOOL

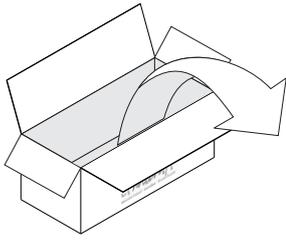


### IN YOUR PACKAGE :

ASSEMBLY INSTRUCTION  
HARDWARE ( AS LISTED ABOVE)

- PARTS TO BE INSTALLED
1. STORAGE CUPBOARD 1pc
  2. LEG 1 set
  3. DOORS 4pcs


### NOTICE

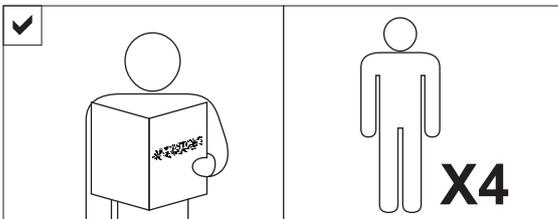

### SYMBOLS



DIRECTION



NUMBER OF  
PERSONS NEEDED





USE SCREWDRIVER  
TO TIGHTEN



USE HAND

## 12345-U - 12346-U OAK BURUNG STORAGE CUPBOARD - BLACK ASSEMBLY INSTRUCTION FOR CUPBOARD INSTALLATION

### A. INSTALLING LEG TO CUPBOARD

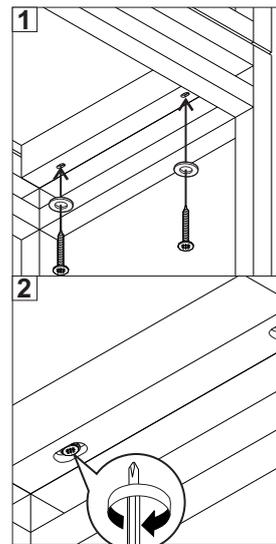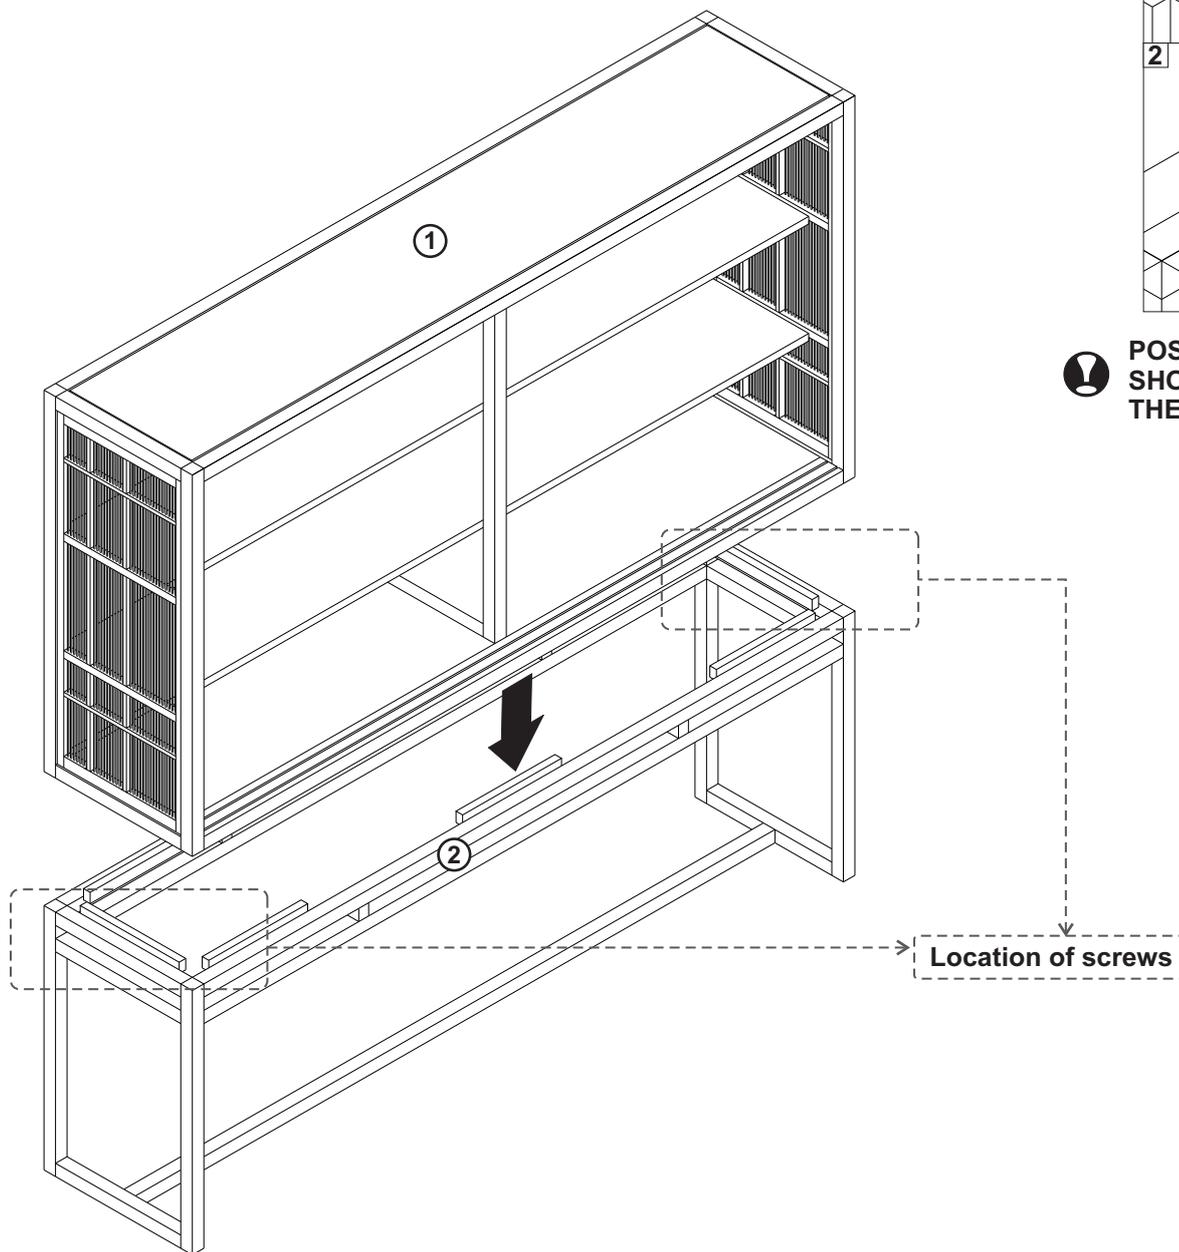

 **POSITION OF SCREW  
SHOULD BE IN  
THE MIDDLE OF HOLE**

 **USE CARPET OR ANY PROTECTIVE SURFACE TO AVOID THE ITEM FROM SCRATCH**

## 12345-U - 12346-U OAK BURUNG STORAGE CUPBOARD - BLACK ASSEMBLY INSTRUCTION FOR CUPBOARD INSTALLATION

### B. INSTALLING THE DOORS

