




Serenza Bed

Paul Newman

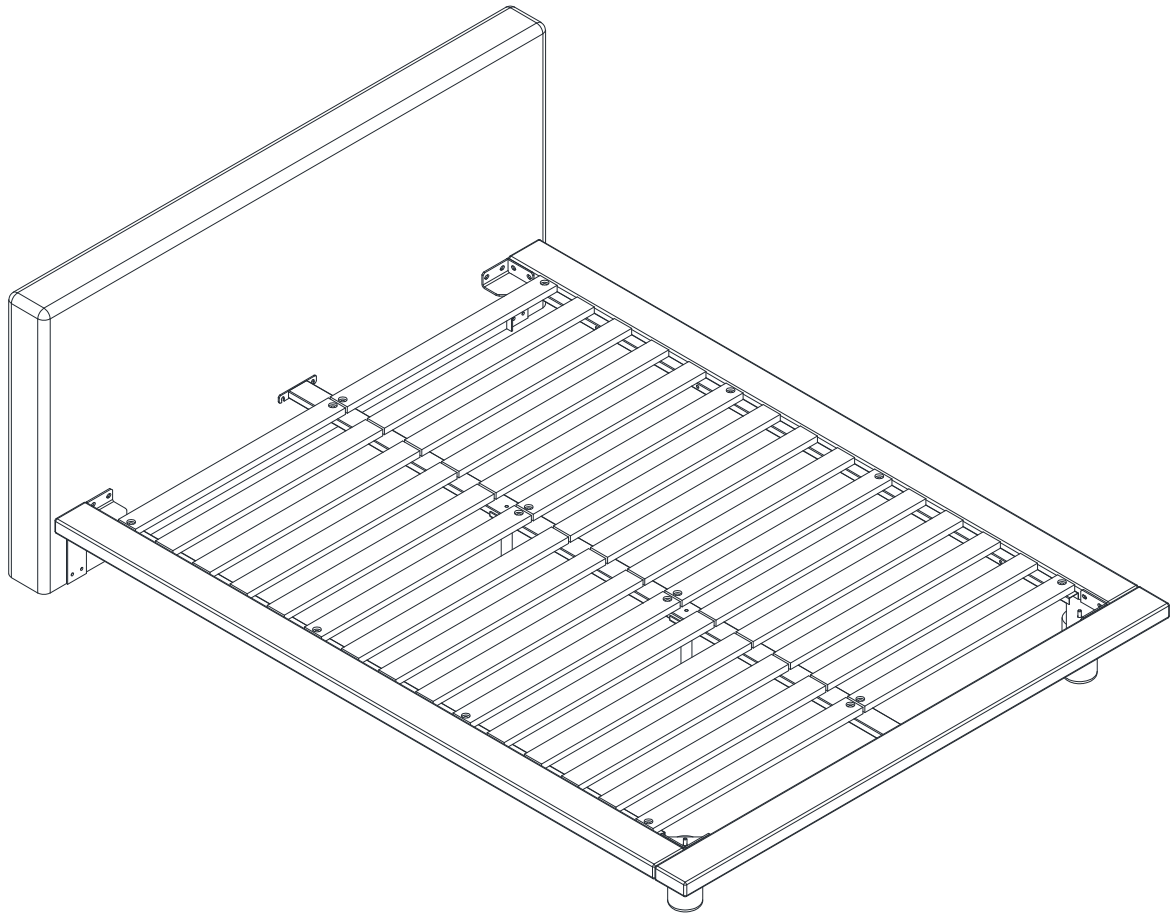


Assembly Instructions


Assembly requires two people and can take up to an hour. Assemble the bed close to final destination. Identify all parts and hardware before starting assembly. Retain packaging until bed is fully assembled to ensure no fittings or components are accidentally discarded. Make sure assembly area is clean and level.

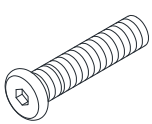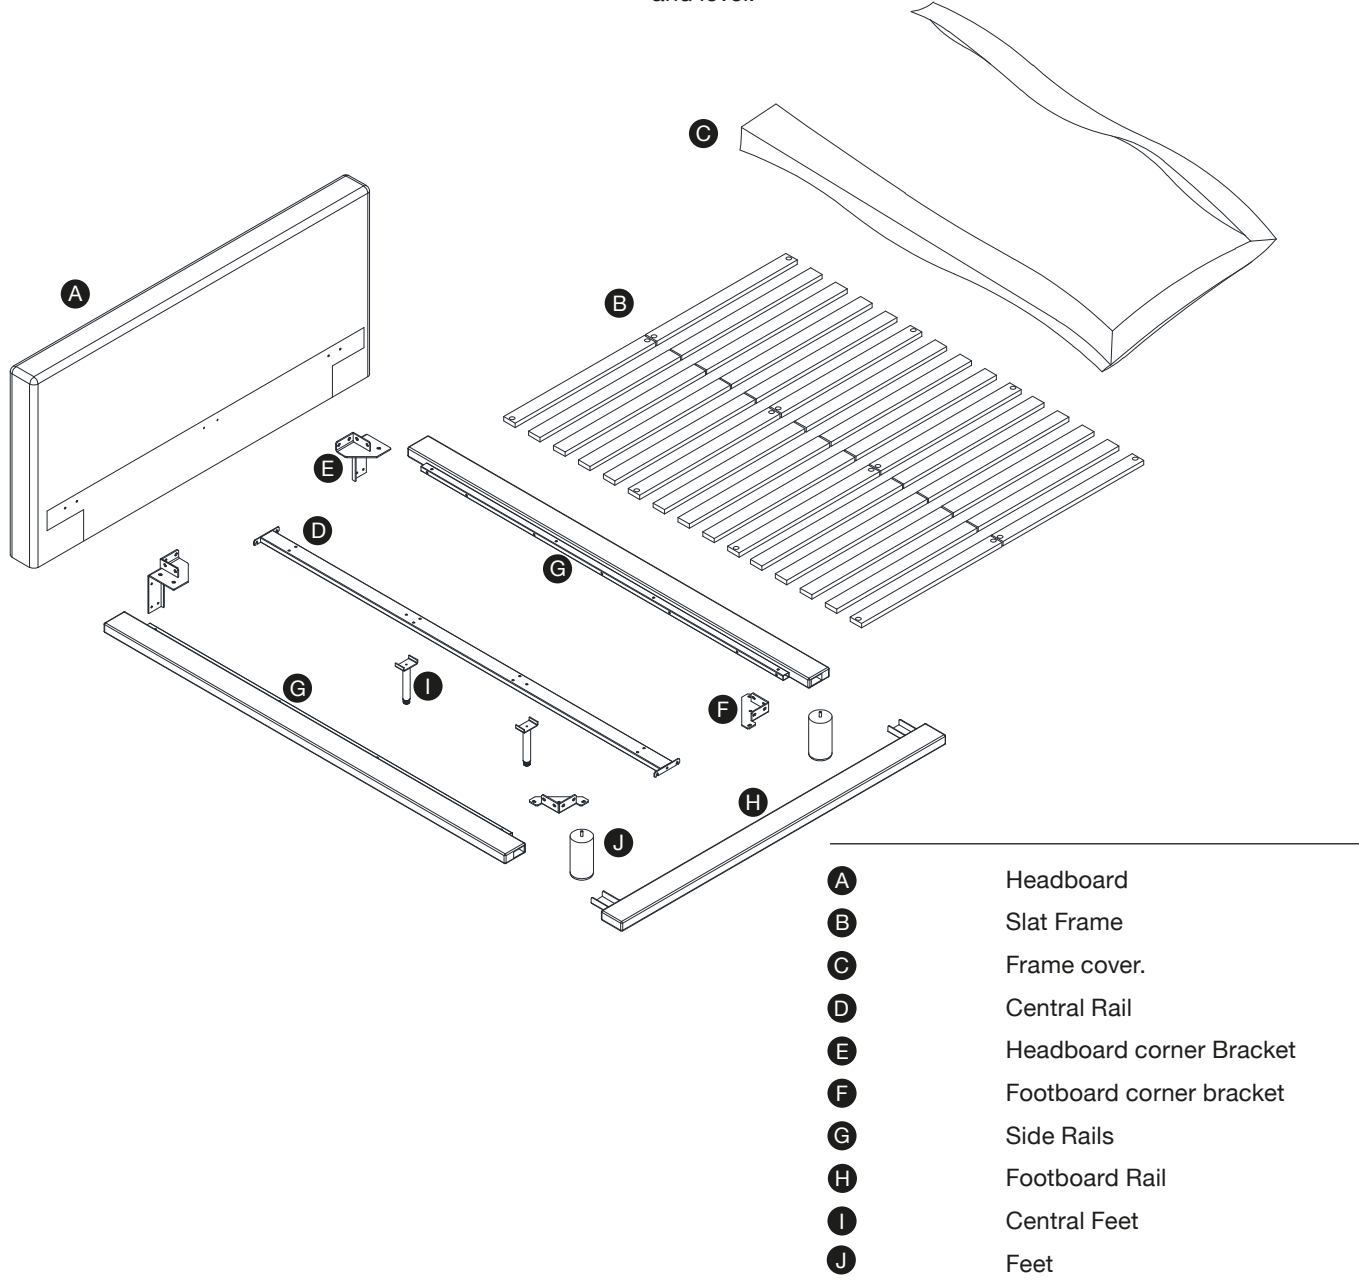

K x 36
6mm x 25mm

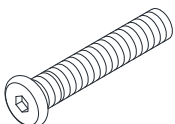

L x 2
8mm x 50mm

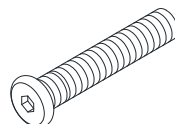

M x 16
6mm x 35mm



N x 36
10mm




O x 52
16mm dia




P x 2
13mm dia



Q x 2
17mm dia

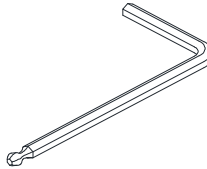

R x 1

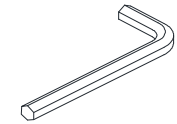


S x 1

Step 01

Take Both side rails (F) and attach the 2 x Headboard corner brackets (E) into place making sure the holes on the underside of the bracket are correctly located.


Repeat for the Footboard corner bracket (F) and secure all as per the image below with 4 x Bolt (K), Spring washer (N) and Washer (O) and fully tighten with Allen key (R).

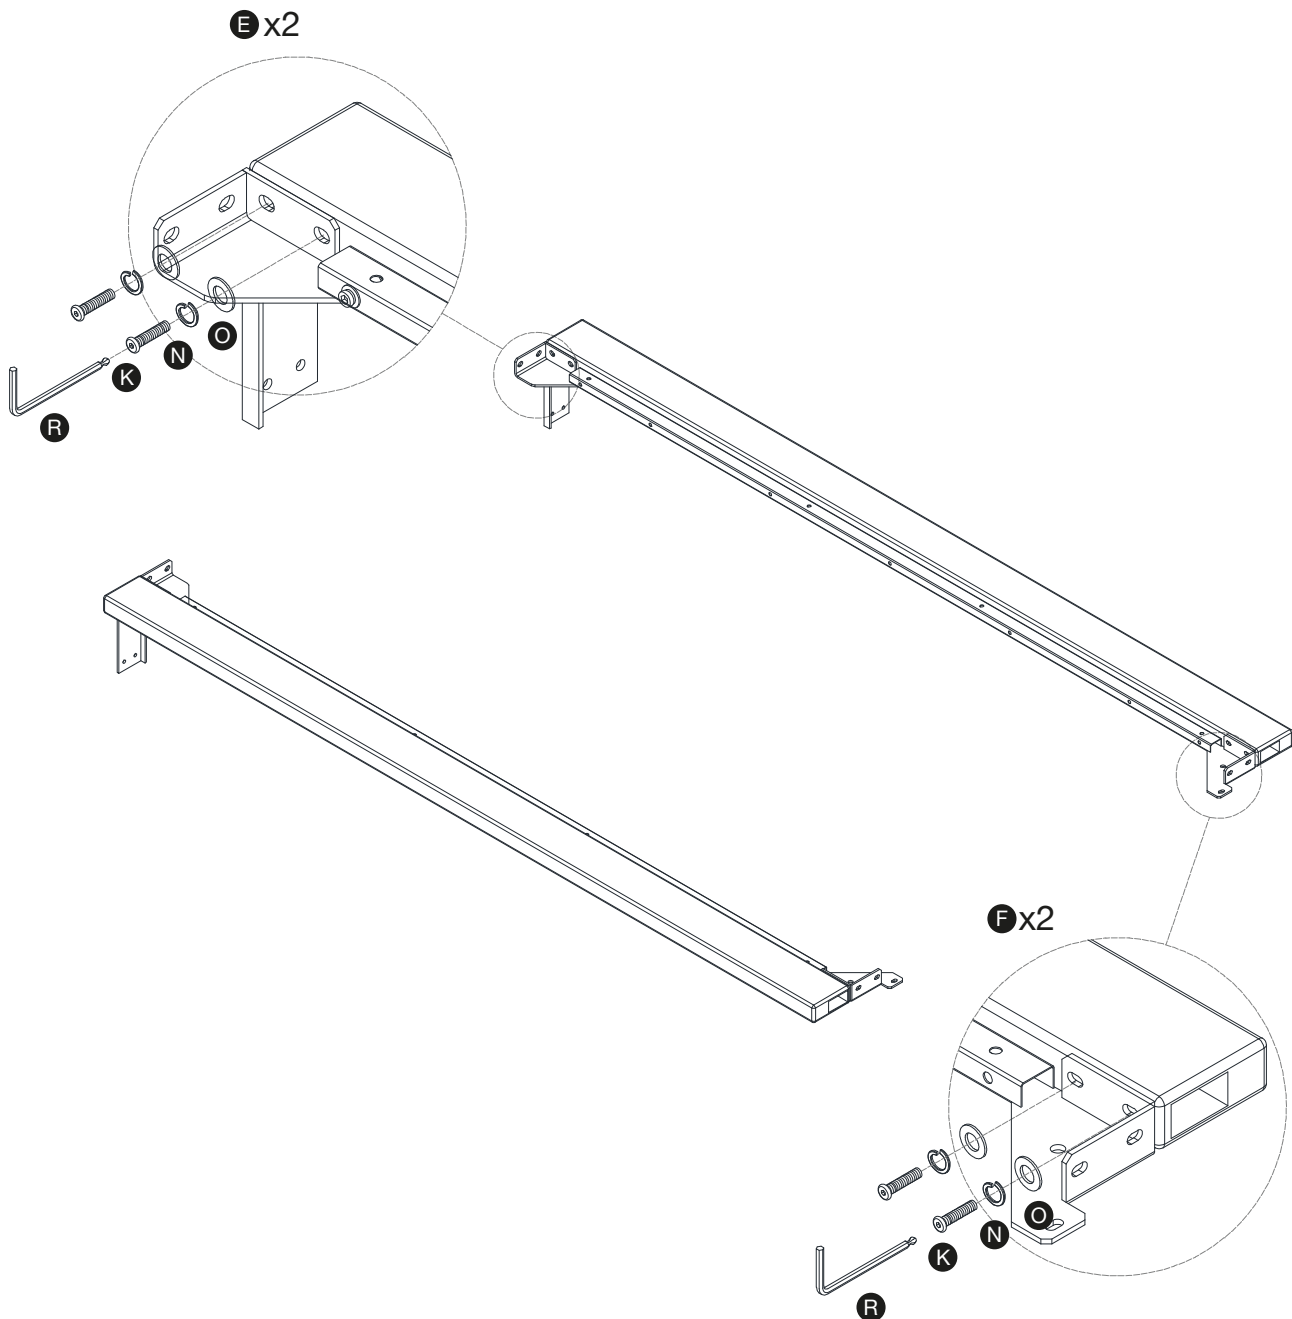

Step 02

Align the footboard rail (H) to the siderails (G) ensuring that you have the correct end of the sideboard rails with the footboard corner brackets (F) on.


Secure the footboard rail to the siderails with 4 x Bolt (K), Spring washer (N) and Washer (O) and fully tighten with Allen key (R).

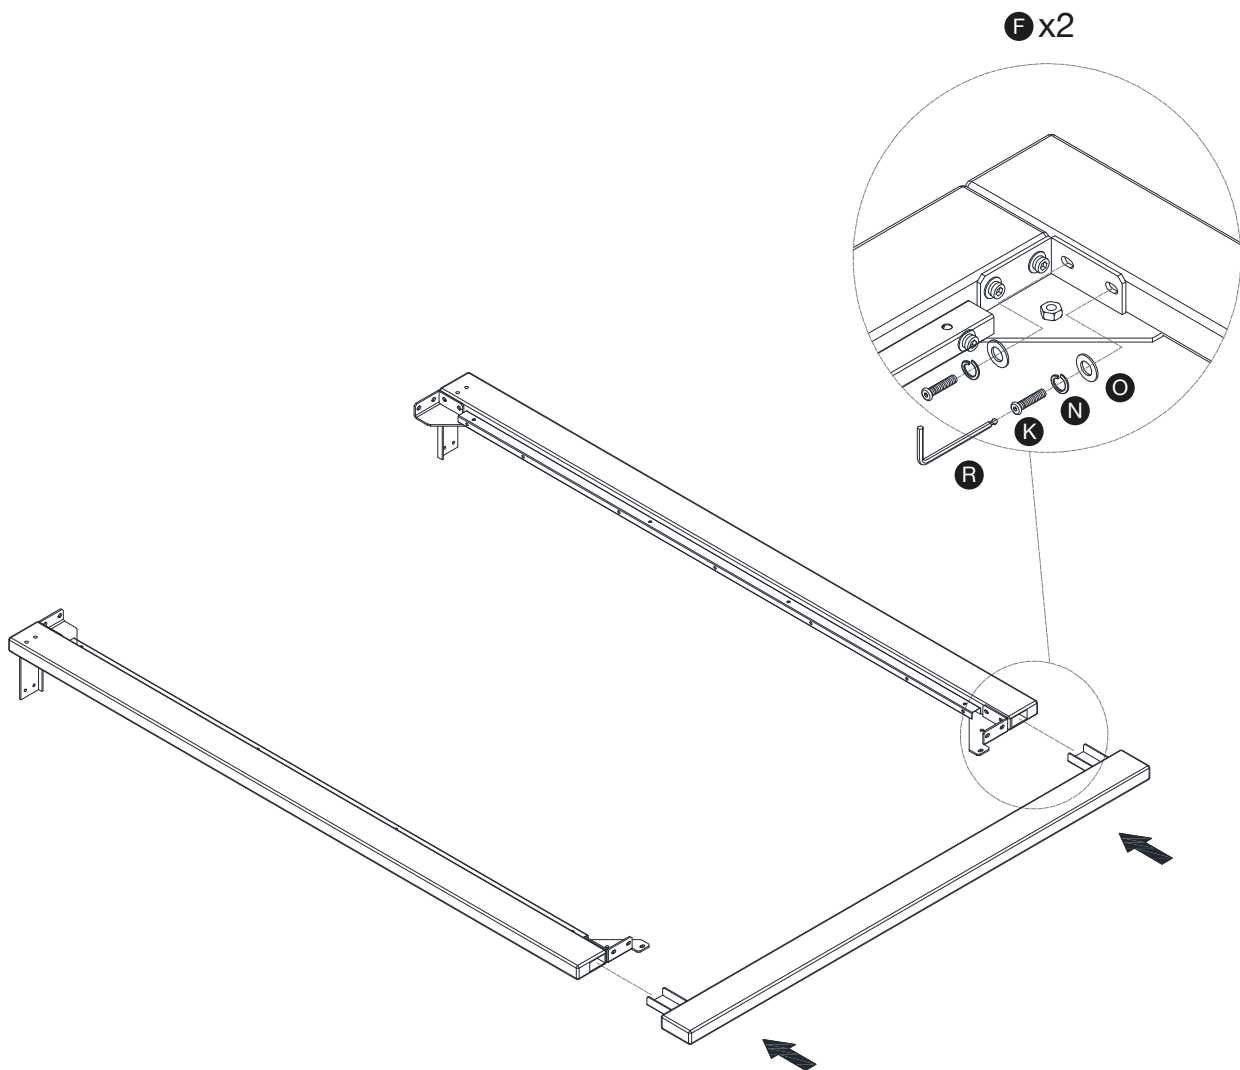

Step 03


Take the assembly and carefully turn over.

Secure the brackets to the side rails and footboard with 6 x Bolt (K), Spring washer (N) and Washer (O) and fully tighten with Allen key (R).

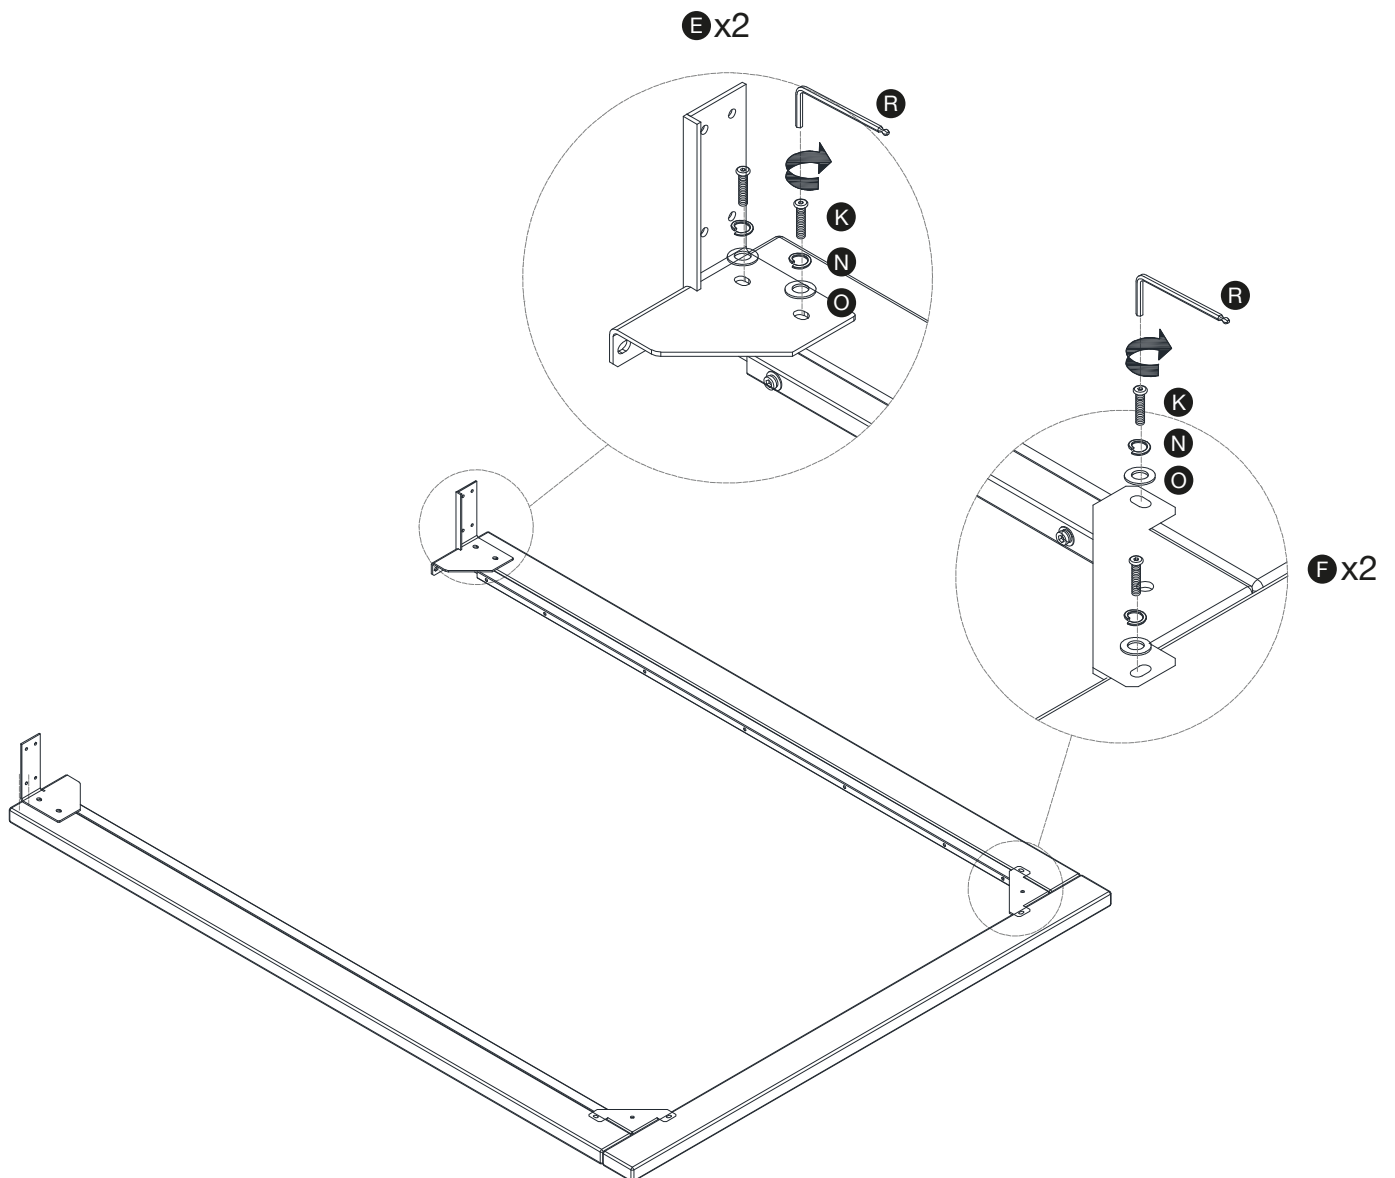

Step 04

With the bed in the same position as the last step (upside down) take the 4 x Feet (J) and rotate until fully tightened onto the brackets as shown below.

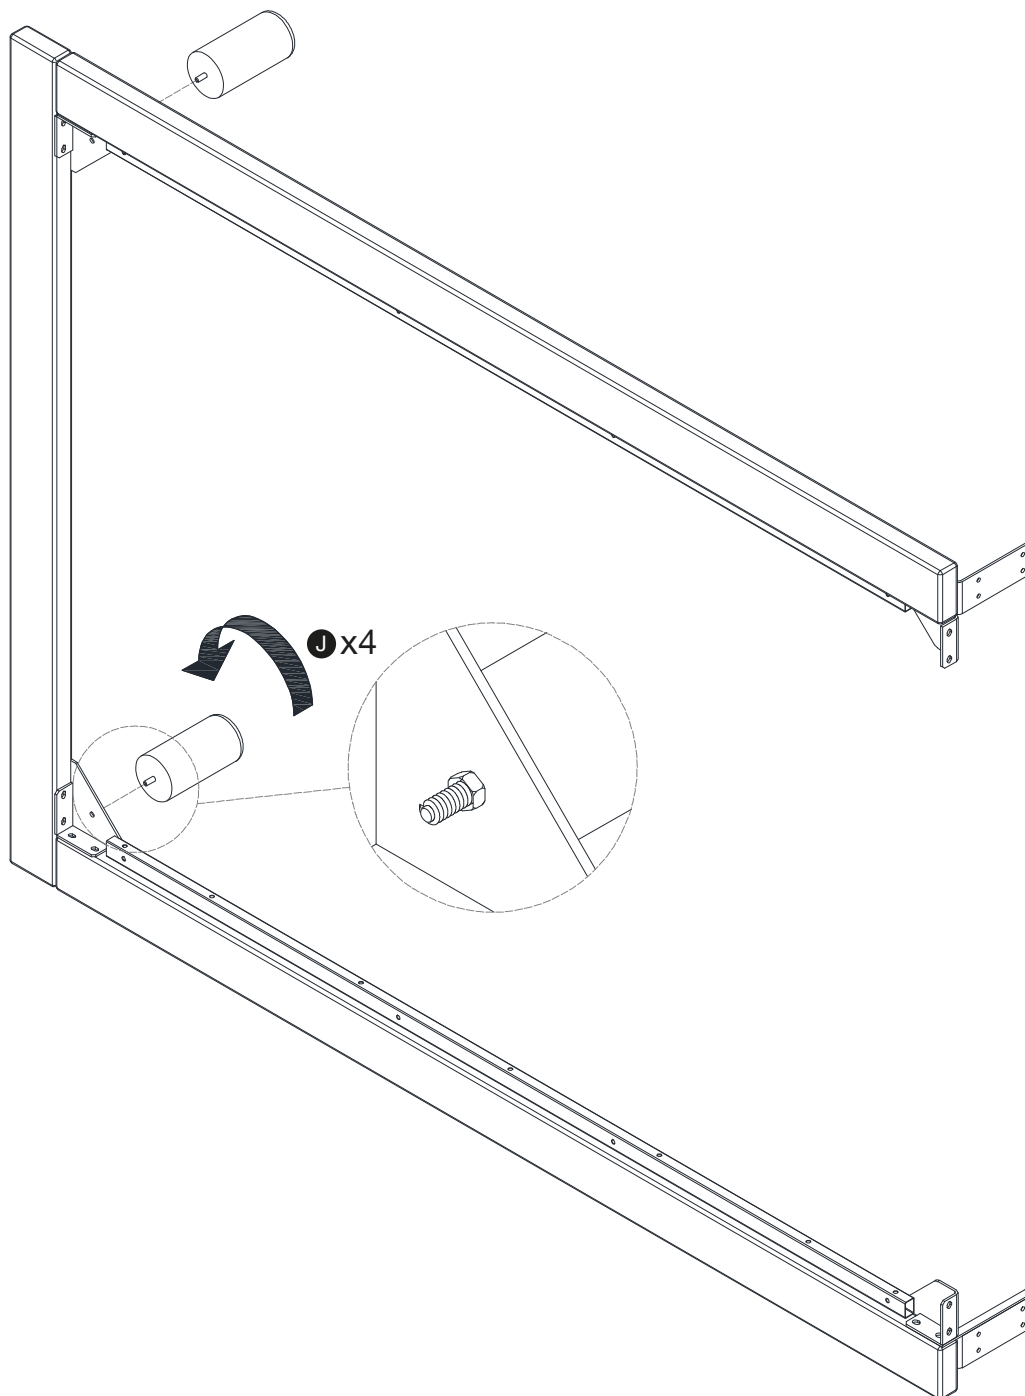


Step 05

Turn the siderails and footboard onto its feet.

Take the headboard (A) and slide the frame assembly into place so that the holes align with the headboard bracket (E).


Take 12 x Bolt (K), Spring washer (N) and Washer (O) and fully tighten the headboard to the headboard brackets (E) with Allen key (R).

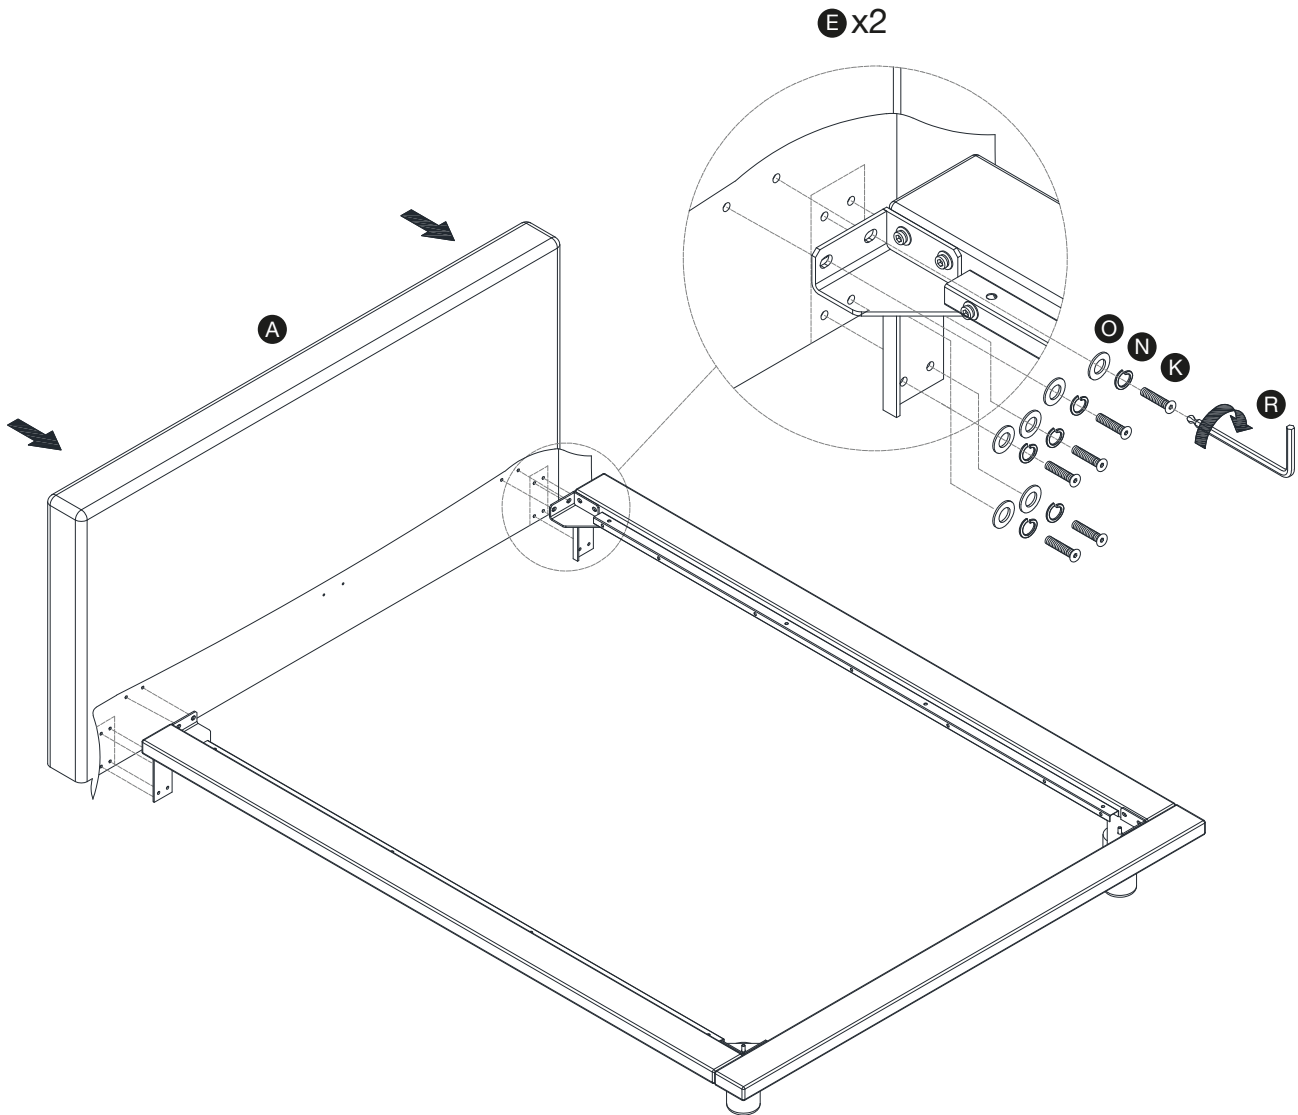

Step 06


Take the Frame cover (C) and align so that the seams are in the correct place.

Remove the protective cover that is on the Velcro on the inside of the cover and secure into position ensuring the cover is tight and holding well into position.

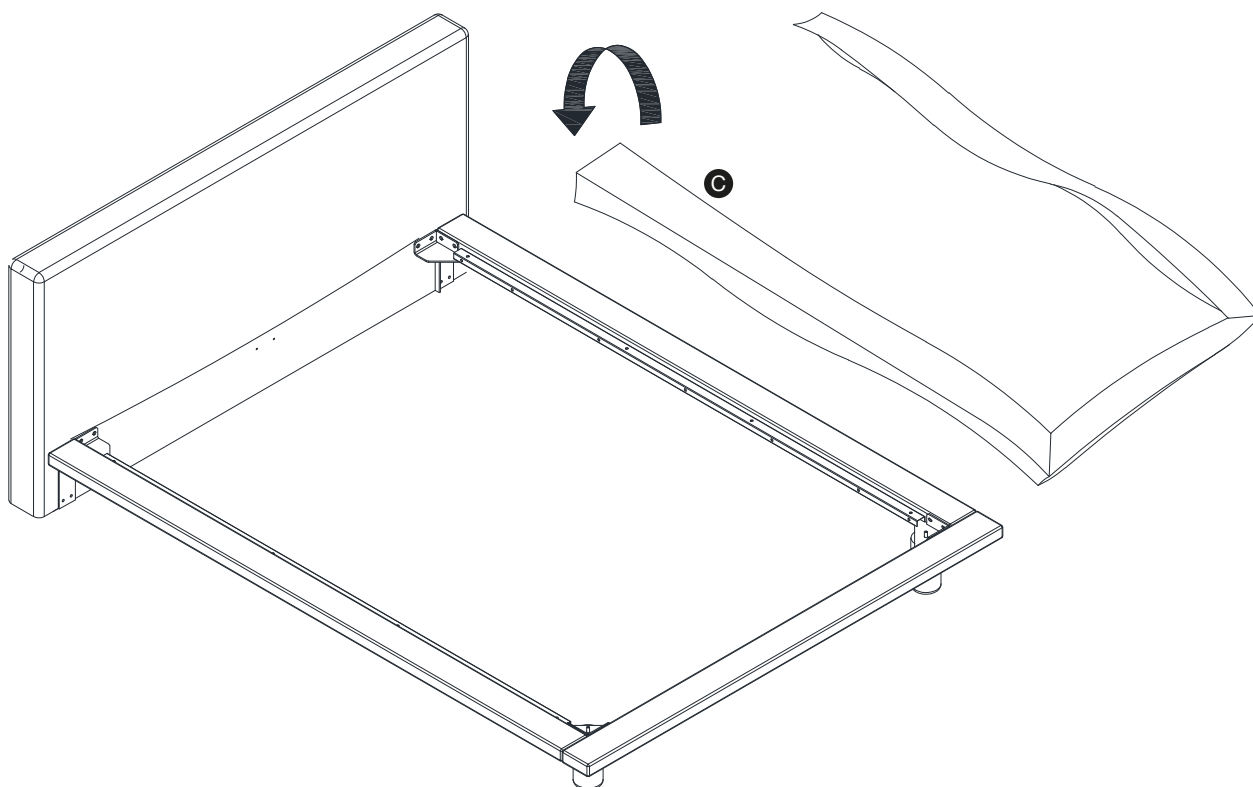

Step 07

Take the central rail (D) and the central feet (I) and with 2 x bolt (L), Spring washer (P) and washer (Q) fully tighten to the central rail with Allen key (S).

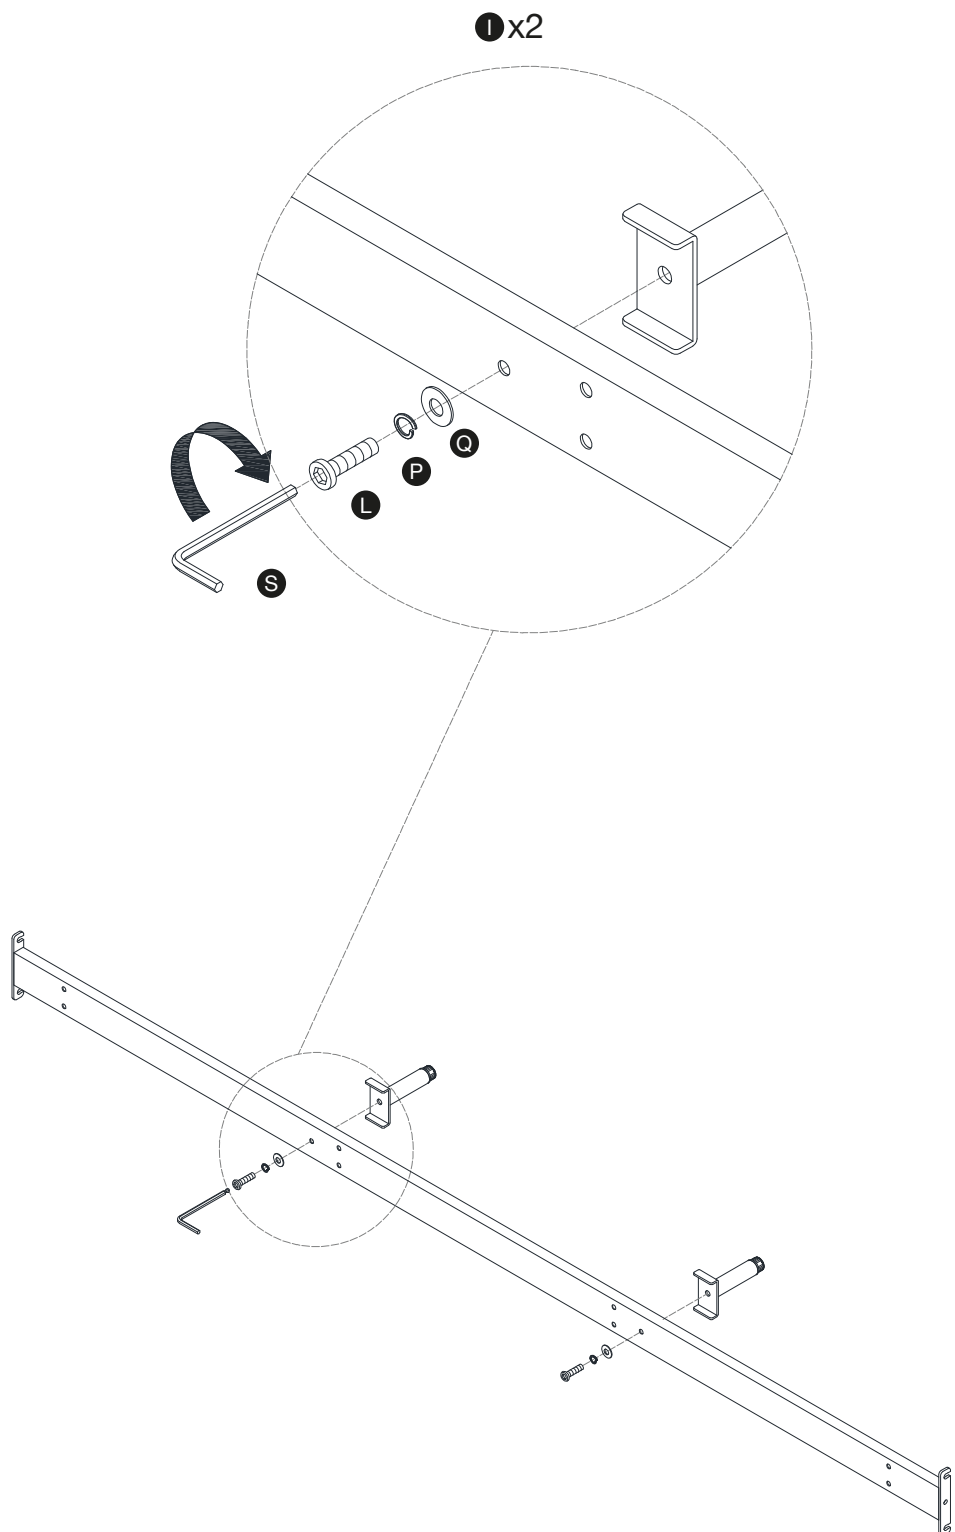


Step 08

Take 4 x bolt (K), Spring washer (N) and washer (O) and lightly insert into the headboard and footboard leaving them loose.

Take the central rail (with feet attached) and locate over the bolts in the headboard and footboard.

Once fully located with the washers on the inside of the brackets fully tighten with the Allen key (R).

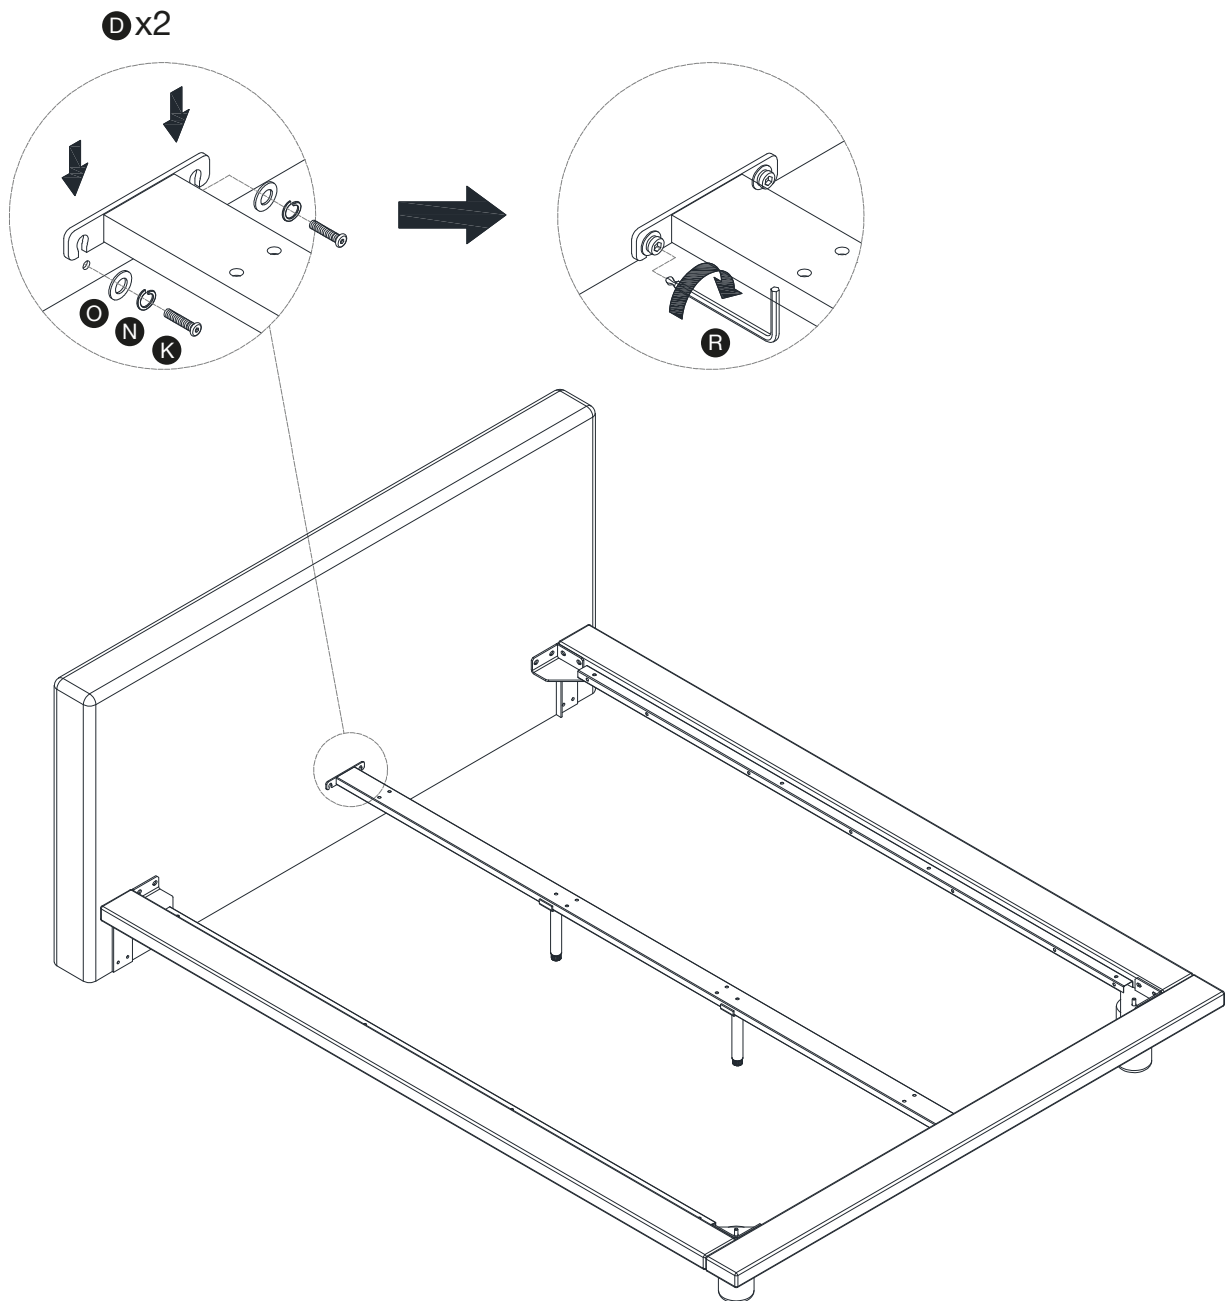


Step 09

Position the slat frames (B) onto the bed frame.


Align the holes on the slat frames with those on the central rail (D) and Side rails (F).

Secure using 16 x bolts (M) with washers (O), and fully tighten with the Allen key (R).

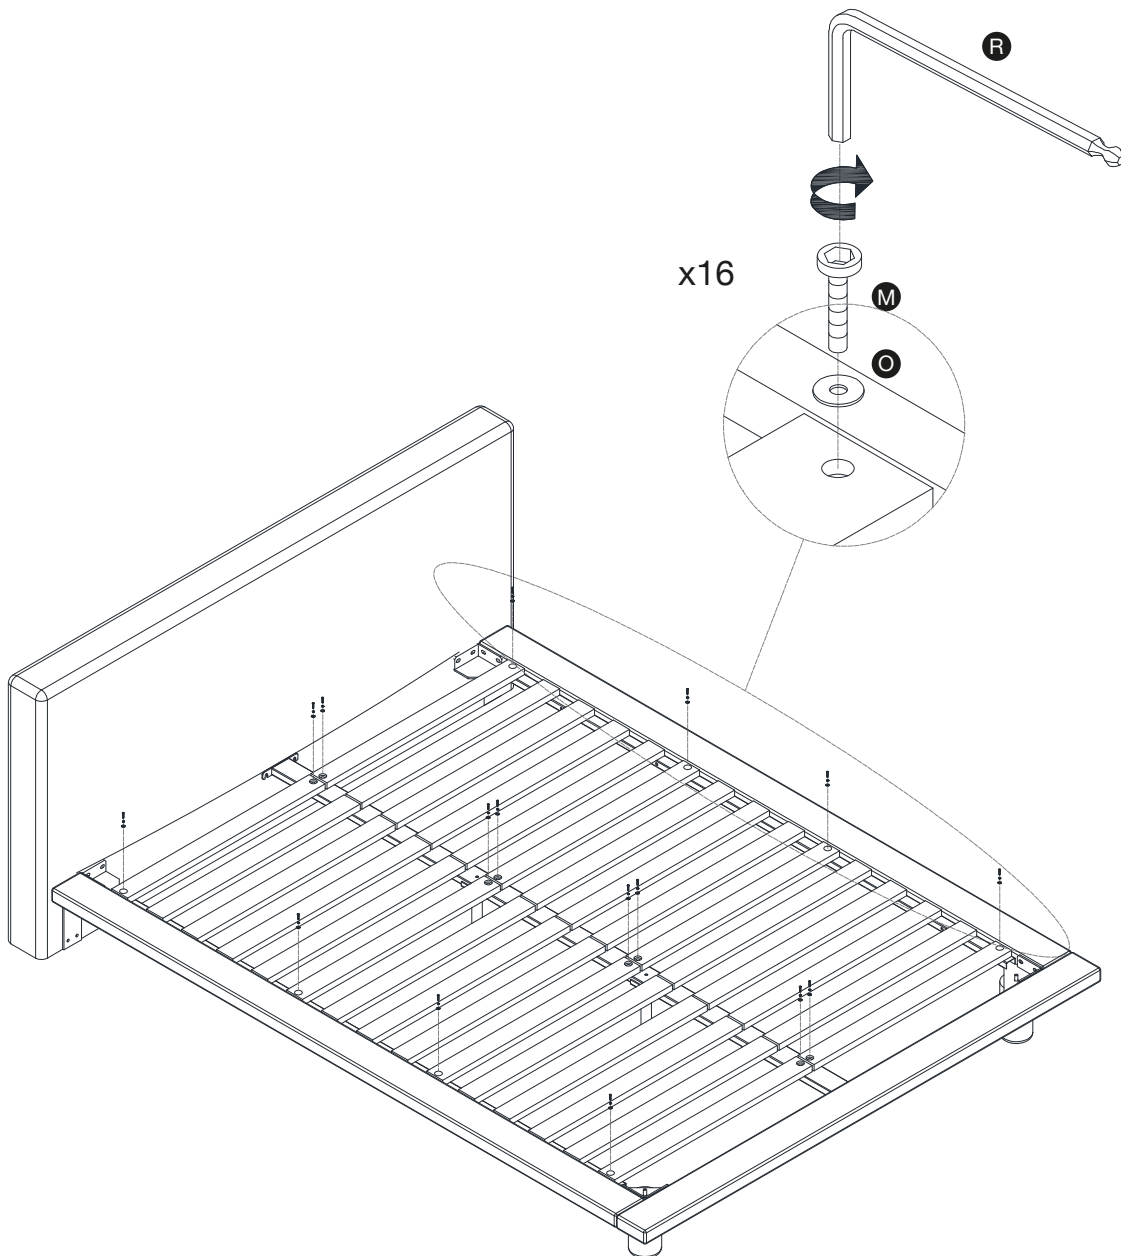



Bedside Cabinets

This section is for the additional Bedside Cabinets. If you have not ordered these, please disregard this section.

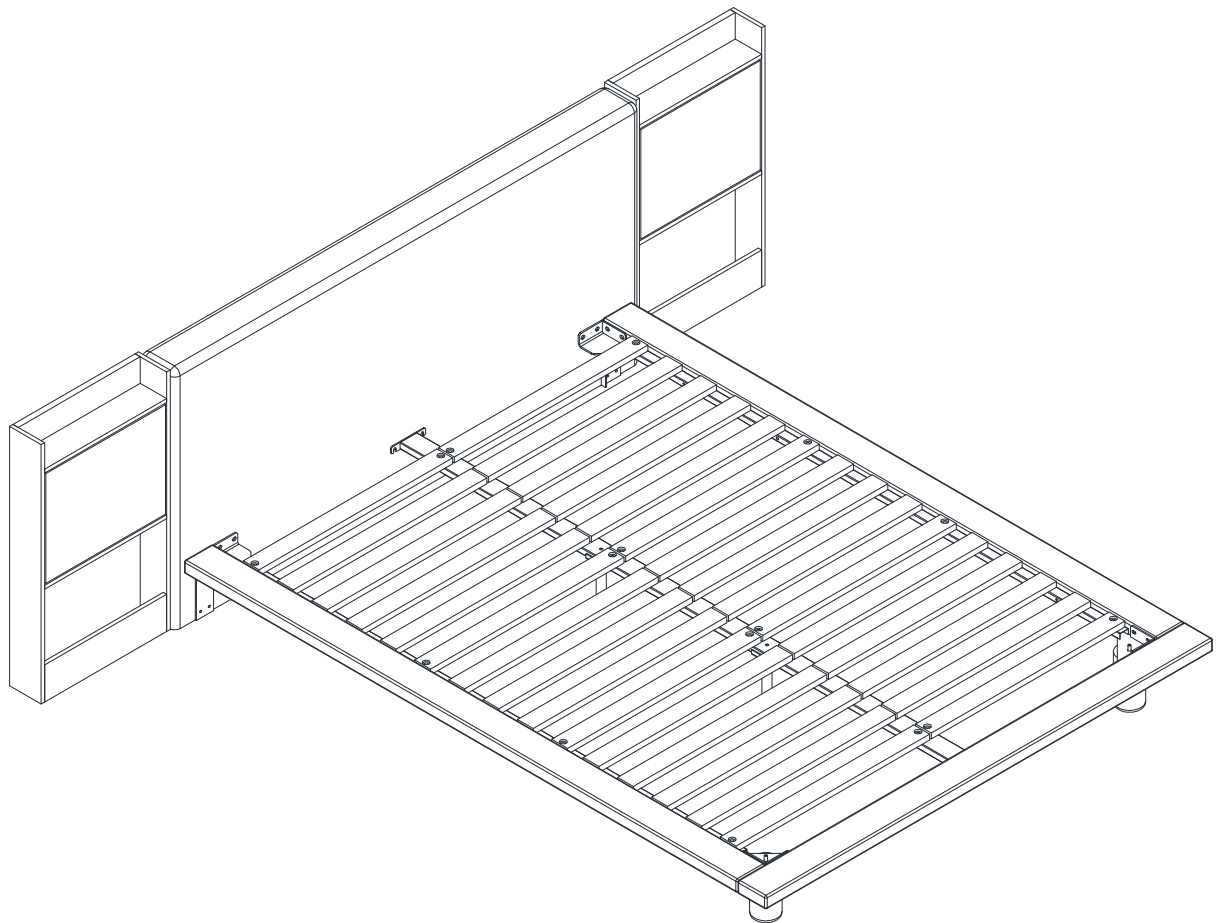

Step 01

Fittings supplied per Bedside Cabinet.

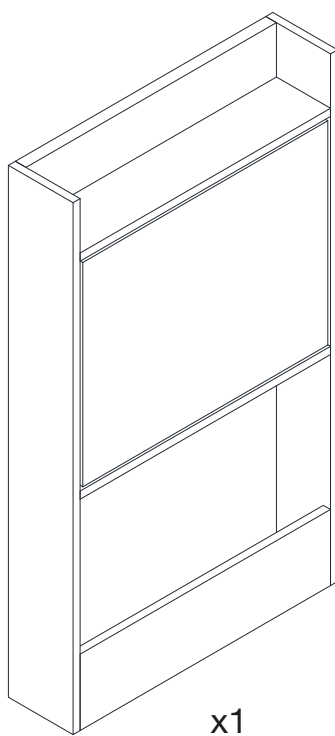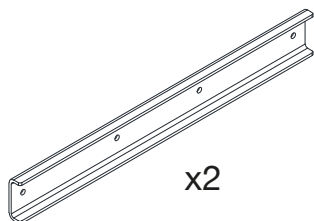


1


Cabinet bracket

2


Cabinet

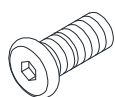

6mm x 16mm

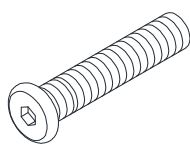

6mm x 30mm

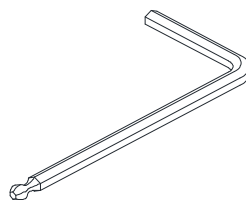


Step 02

Take 2 x Cabinet brackets (per cabinet being assembled) and secure to the back of the cabinet with 2 x bolt (T) - you can have the bracket on either side of the cabinet depending on which side of the headboard you require.

Align the bedside to the headboard and make sure the holes are aligned - with 2 x bolt (U) fully tighten to the headboard.

If you have a second headboard repeat the above with the bracket on the opposite side.

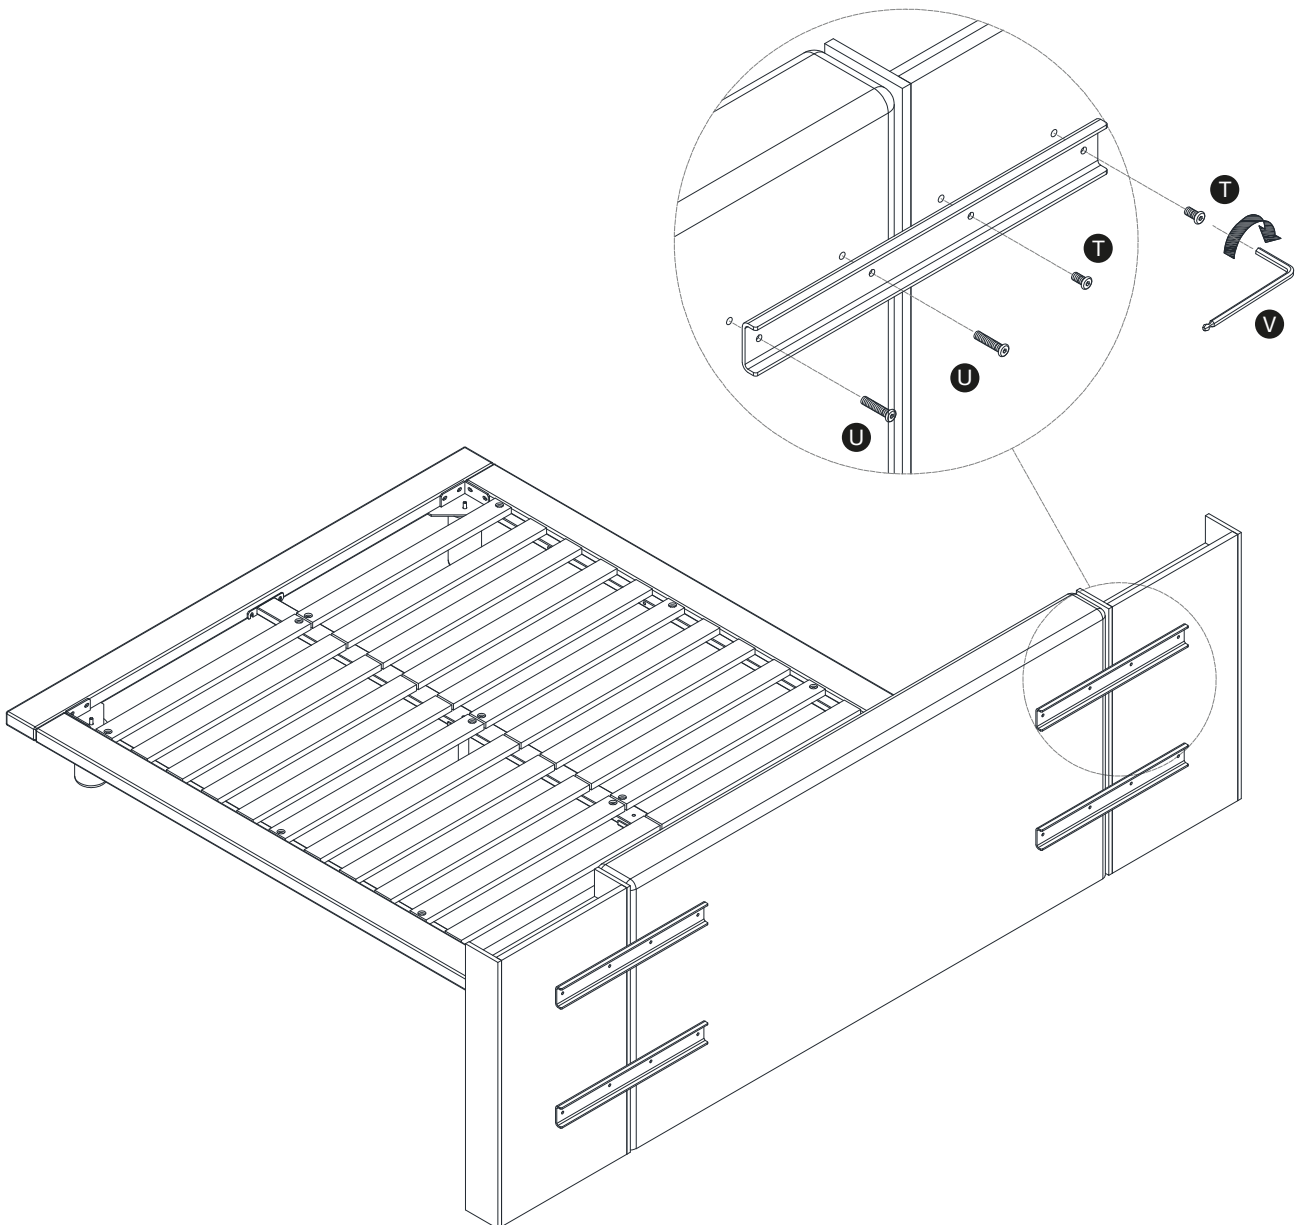

Care Instructions

Serenza Bed *designed by* Paul Newman

To prolong the life of the product and retain its appearance and functionality, we would like to give you some relevant information and care advice:

General Care:

- Fluff headboard periodically to promote uniform wear and to help maintain comfort.
- Have upholstered items professionally cleaned when needed (we recommend around once per year).
- Place furniture out of direct sunlight to help prevent fading. Avoid placing furniture near fireplaces or radiators.
- Remove gum or wax by freezing it with a small plastic bag of ice until it hardens, then gently chip away. Repeat as necessary and blot with a damp, clean cloth to remove any stain left behind.
- Prevent spills from turning into stains by blotting them immediately with a clean dry cloth. Always blot from the outer edge of a spill inward to help avoid a stain ring from forming. Do not use water to remove oil-based stains.
- Use clear, cool water to help blot up resistant spills. Never use hot water, which tends to set stains.

Fabric Cleaning:

- Do not use cleaning solvents of any kind.
- Never let water saturate fabric or pool in seams.
- Brush pile fabrics lightly with a stiff bristle brush to remove minor stains and to regain original appearance. Do not rub or use excessive force when brushing.
- Professional cleaning is recommended.

Leather Cleaning:

- Dust is the enemy of leather upholstery, causing it to wear excessively and crack. Remove dust by wiping away with a dry cloth regularly and vacuum using the appropriate attachments. Do not use dust-cleaning products intended for wood furniture, which can damage leather.
- Some stains will blend into leather over time and become part of its patina.

We thank you for purchasing this product and wish you many years of enjoyable and functional use.

For more related products please visit: casefurniture.com